

YAZOO

1990-1993

YAZOO YHR-SERIES COMMERCIAL MOWER OWNER'S MANUAL

SAFETY SUMMARY

EQUIPMENT DESCRIPTION AND DATA

OPERATING PROCEDURES

TROUBLESHOOTING PROCEDURES

ILLUSTRATED PARTS LIST

YHR-SERIES MODELS INCLUDE:

A ■ YHRLK23


B ■ YHRLW20






C ■ YHRLK20

D ■ YHRK20

E ■ YHRLK18

F ■ YHRK18

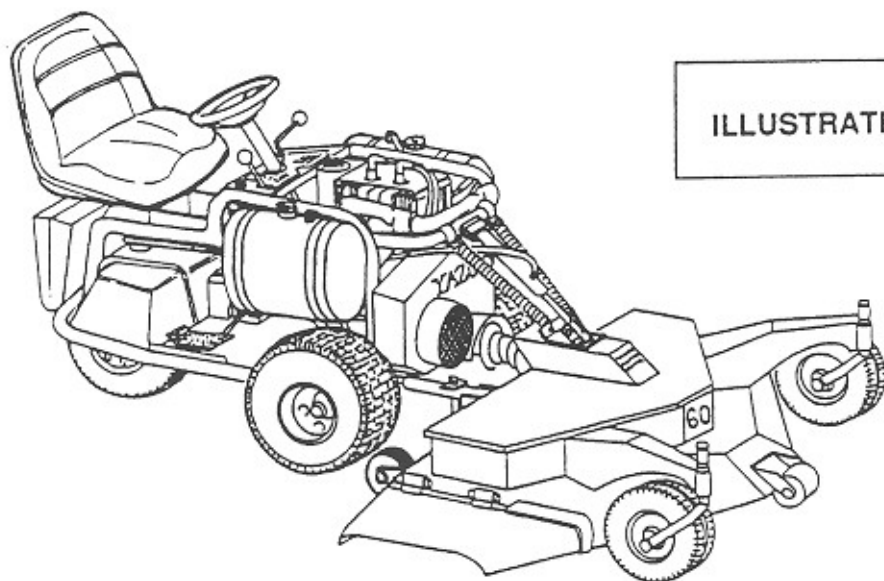

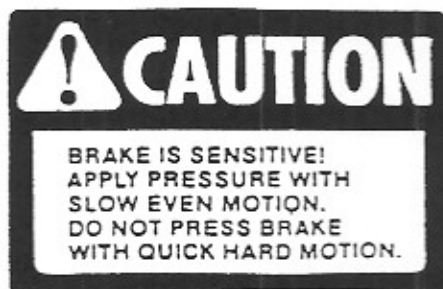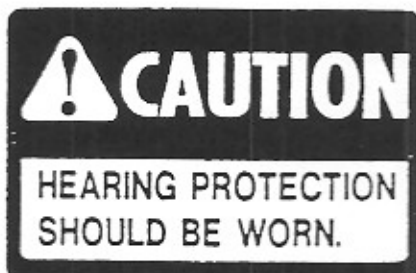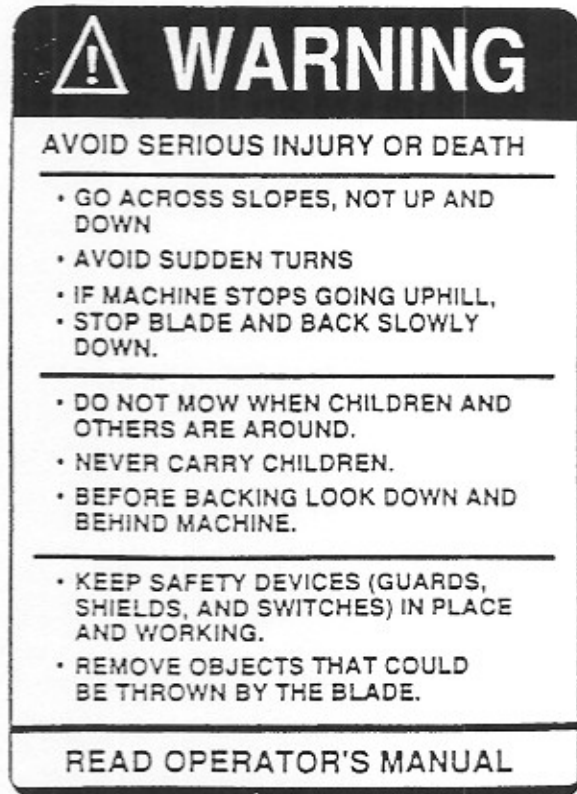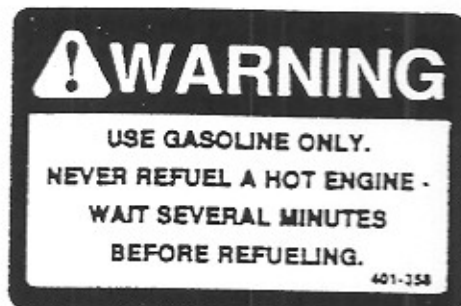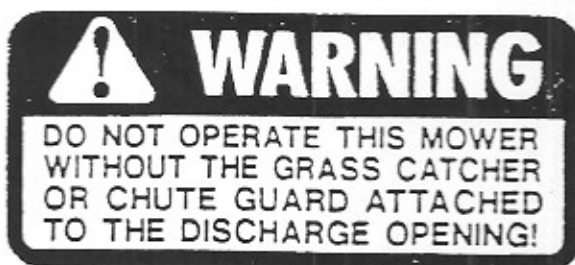

GENERAL.

This illustrated parts listing is for the **YAZOO YHR-SERIES** mowers manufactured by YAZOO MANUFACTURING COMPANY, P.O. BOX 4449, 3650 Bay Street, Jackson, MS 39296. The purpose of this chapter is to provide a listing, with illustrations, of the parts that comprise, and are necessary for the support of, the **YHR-Series** mowers. The information is listed with the parts as they are assigned to each Figure in the parts listing under the heading **"FIGURE KEY NUMBER INDEX"**. For example, item (**KEY**) number 21 in Figure 1 will be listed as **"1-21"** under the **"KEY"** column along with the part number, name, and quantity(ies) of that item used in that application.

EXPLANATION OF USED ON CODES

Differences between the models in this illustrated parts list are noted by the **"USED ON CODE"** column in the Illustrated Parts List. The use of a code letter is assigned to each model as shown in the following table.

The letter in the **"USED ON CODE"** column identifies all part numbers associated with that particular model. Parts for which the **"USED ON CODE"** column is blank are common to all models in the manual.

YHRLK23	A
YHRLW20	B
YHRLK20	C
YHRK20	D
YHRLK18	E
YHRK18	F

ILLUSTRATED PARTS LIST

KEY	PART NUMBER	DESCRIPTION	USED ON CODE	QTY
1-1	1903-021	SEAT		1
1-2	1923-029	SWITCH		1
1-3	0209-114	BOLT, CAP 5/16"-18 X1"		2
1-4	1916-080	SPRING, SEAT		1
1-5	2301-008	WASHER, LOCK 1/2"		2
1-6	0209-494	BOLT, 1/2" - 13 X 3/4"		2
1-7	1401-071	NUT, 5/8" SAE FULL		1
1-8	2301-010	WASHER, LOCK 5/8"		1
1-9	2301-028	WASHER		1
1-10	2304-009	WEIGHT		1
1-11	P/O ITEM 1-32	NUT		1
1-12	P/O ITEM 1-32	WASHER		1
1-13	0706-002	GUAGE, AMMETER		1
1-14	0706-003	GUAGE, HOURMETER		1
1-15	0301-112	THROTTLE CONTROL	A,B	1
1-15A	0301-124	THROTTLE CONTROL	C,D,E,F	1
1-16	1807-006	RIVET, POP		2
1-17	0301-125	CABLE, CHOKE	C,D,E,F	1
1-17A	0301-114	CABLE, CHOKE	A	1
1-18	1901-229	SCREW, #10-24X1/2"	A	1
1-19	P/O ITEM 1-17	WASHER, LOCK		1
1-20	P/O ITEM 1-17	NUT		1
1-21	0902-001	INCLINOMETER		1
1-22	P/O ITEM 1-15	NUT		1
1-23	P/O ITEM 1-15	WASHER		1
1-24	P/O ITEM 1-14	NUT		1
1-25	P/O ITEM 1-14	WASHER		1
1-26	P/O ITEM 1-14	BRACKET		1
1-27	P/O ITEM 1-13	BRACKET		1
1-28	P/O ITEM 1-13	WASHER		2
1-29	P/O ITEM 1-13	NUT		3
1-30	2301-284	WASHER, LOCK		1
1-31	1401-197	NUT		1
1-32	1923-009	SWITCH, PANEL	A,C,D,E,F	1
1-32A	1923-010	SWITCH, PANEL	A	1
1-32B	1923-048	SWITCH, PANEL	B	1
1-33	0811-044	HARNESS, WIRE	C,D,E,F	1
1-33A	0811-043	HARNESS, WIRE	A	1
1-33B	0811-045	HARNESS, WIRE	B	1
1-34	1901-018	SCREW, 1/4"X1/2" HD		1
1-35	1923-046	SWITCH, MODULE	B	1
1-35A	1923-042	SWITCH, MODULE	C,D,E,F	1

ILLUSTRATED PARTS LIST

KEY	PART NUMBER	DESCRIPTION	USED ON CODE	QTY
1-35B	1923-040	SWITCH, MODULE	A	1
1-36	1401-001	NUT, 3/16"	A,C	1
1-37	2301-001	WASHER, LOCK	A,C	1
1-38	1923-041	SWITCH, RELAY	A,C	1
1-39	0103-097	AXLE, 3/4" X 10 1/2"		1
1-40	2501-018	YOKE		1
1-41	1401-081	NUT, FLEX LOCK 3/4"		1
1-42	1913-216	SPACER, 1 1/2"		1
1-43	1902-005	SEAL		1
1-44	0204-034	BEARING		1
1-45	0312-008	CONE		1
1-46	0807-038	HUB, REAR WHEEL		1
1-47	1913-074	SPACER, RIDER REAR		1
1-48	2305-018	WHEEL ASSEMBLY		1
1-49	1401-061	NUT, TAPERED 7/16"		5
1-50	1201-098	LEVER ASSY., BLADE ENG.		1
1-51	1604-042	PIN, COTTER 1/8" X 1"		1
1-52	1401-001	NUT, 3/16" USS		2
1-53	2301-001	WASHER, LOCK 3/16"		2
1-54	1401-010	NUT, 1/4" USS		1
1-55	2301-005	WASHER, STAR LOCK		1
1-56	1401-010	NUT, 1/4" USS		3
1-57	2301-005	WASHER, STAR LOCK		3
1-58	0209-026	BOLT, 1/4" X 1" NC		1
1-59	0214-489	BRACKET, SWITCH ENG.		1
1-60	1923-025	SWITCH, N/O		1
1-61	0214-490	BRACKET, BLADE SWITCH		1
1-62	2301-001	WASHER, LOCK 3/16"		2
1-63	1401-001	NUT, 3/16" USS		2
1-64	1901-229	SCREW #10-24 X .50 HEX		2
1-65	0204-077	BEARING, PILLOW BLOCK		1
1-66	0204-077	BEARING, PILLOW BLOCK		1
1-67	1904-288	STEERING SHAFT WLDT		1
1-68	1102-013	KEY, WOODRUFF		1
1-69	0204-161	BEARING, UPPER STEER.		1
1-70	2301-081	WASHER 1 1/4" X 3/4"		1
1-71	2301-004	WASHER, LOCK 5/16"		2
1-72	1401-020	NUT, 5/16" USS		2
1-73	1601-042	PIN, COTTER 1/8" X 1"		1
1-74	0208-011	BOLT 10-24X1 3/4"		1

ILLUSTRATED PARTS LIST

KEY	PART NUMBER	DESCRIPTION	USED ON CODE	QTY
1-75	1604-160	PIN, ROLL	040-0381	1-1
1-76	1401-002	NUT, LOCK	100-1041	1-1
1-77	0702-150	GEAR, STEER. PINION	100-1025	1-1
1-78	0209-114	BOLT, CAP 5/16" X 1"	140-0381	1-1
1-79	0209-114	BOLT, CAP 5/16" X 1"	100-0100	1-1
1-80	2301-021	WASHER, FLAT 5/16"	010-1025	1-1
1-81	0214-452	BRKT., BELT GUARD MTG.	180-1041	1-1
1-82	2301-004	WASHER, LOCK 5/16"	010-0101	1-1
1-83	NOT USED		000-0001	0-1
1-84	0209-120	BOLT, 5/16" X 1 1/4"	140-0350	1-1
1-85	2301-004	WASHER, LOCK 5/16"	000-0100	1-1
1-86	2301-004	WASHER, LOCK 5/16"	000-1050	1-1
1-87	1401-020	NUT, 5/16" USS	140-0101	1-1
1-88	2301-004	WASHER, LOCK 5/16"	010-0101	1-1
1-89	1401-020	NUT, 5/16" USS	140-0101	1-1
1-90	0209-114	BOLT, CAP 5/16"	000-0101	1-1
1-91	0209-114	BOLT, CAP 5/16"	040-0381	1-1
1-92	2301-021	WASHER, FLAT 5/16"	100-1041	1-1
1-93	0704-363	GUARD, FRONT	100-1025	1-1
1-94	0704-364	GUARD, BELT	010-1010	1-1
1-95	0209-425	BOLT, 7/16" X 1/2"	000-1025	4-1
1-96	0603-004	FITTING, GREASE	010-1041	1-1
1-97	1604-086	PIN, COTTER 3/32"X1/2"	000-1025	1-1
1-98	2301-022	WASHER, FLAT 3/8"	000-0350	1-1
1-99	2301-004	WASHER, LOCK 5/16"	000-0101	1-1
1-100	1401-020	NUT, 5/16" USS	000-0381	1-1
1-101	0209-320	BOLT, 3/8" x 1 1/2"	000-0101	1-1
1-102	2301-021	WASHER, FLAT 5/16"	100-1025	1-1
1-103	0209-114	BOLT, CAP 5/16"	140-0381	1-1
1-104	2301-004	WASHER, LOCK 5/16"	000-1041	1-1
1-105	1401-020	NUT, 5/16" USS	000-0381	1-1
1-106	1811-004	GROMMET, RUBBER	000-0381	1-1
1-107	1808-284	ROD, FRT. ENGAGING	000-0381	1-1
1-108	2301-022	WASHER, FLAT 3/8"	010-0381	1-1
1-109	2301-022	WASHER, FLAT 3/8"	000-0381	1-1
1-110	1401-032	NUT, 3/8" SAE NF	140-1025	1-1
1-111	2301-031	WASHER, FLAT 7/16"	000-1025	1-1
1-112	2301-007	WASHER, LOCK 7/16"	000-0381	1-1
1-113	1401-040	NUT, 7/16" NC	040-0381	1-1
1-114	0502-002	END, ROD	110-0050	1-1

ILLUSTRATED PARTS LIST

KEY	PART NUMBER	DESCRIPTION	USED ON CODE	QTY
1-115	2301-002	WASHER, LOCK 3/8"	190-1081	1
1-116	1401-030	NUT, 3/8" USS	210-2081	1
1-117	1401-051	NUT, LOCK 1/2" SAE FULL	2301-0381	1
1-118	2301-024	WASHER, FLAT 1/2"	1401-0301	1
1-119	1913-288	SPACER, STEER. STOP	2301-0381	1
1-120	2301-336	WASHER, THRUST	2301-0381	1
1-121	1401-051	NUT, LOCK 1/2" SAE FULL	2301-0381	1
1-122	2301-024	WASHER, FLAT 1/2"	1401-0301	1
1-123	1913-287	SPACER, STEER. GEAR PVT.	2301-0381	1
1-124	0215-181	BUSHING, STEER. GEAR	2301-0381	1
1-125	1913-206	SPACER, REAR WEIGHT	2301-0381	1
1-126	1811-028	GROMMET, RUBBER	210-2081	1
1-127	0209-519	BOLT, 1/2" X 1/2" NF	2301-0381	1
1-128	1401-070	NUT, JAM 5/8" SAE	1401-0301	1
1-129	0502-015	END, ROD	1401-0301	1
1-130	0209-517	BOLT, 1/2" X 2" NF	2301-0381	1
1-131	0209-021	BOLT, 1/4" X 3/4" USS	1901-0341	3
1-132	2301-097	WASHER, THRUST	2301-0381	1
1-133	0204-078	BEARING, THRUST	1901-0341	1
1-134	2301-097	WASHER, THRUST	2301-0381	1
1-135	0215-101	BUSHING	2301-0381	2
1-136	1401-021	NUT, LOCK 5/16" USS	2301-0381	2
1-137	2301-021	WASHER, FLAT 5/16"	2301-0381	2
1-138	1901-229	SCREW, #10-24 X 1/2" HEX	2301-0381	2
1-139	1104-012	KNOB, 3/8"-16 THD.	2301-0381	1
1-140	1901-034	SCREW, SET 3/8" X 3/4"	2301-0381	1
1-141	0209-510	BOLT, .500-20 X 1.75 H.H.	2301-0381	1
1-142	0311-097	STEERING ARM WLDT	2301-0381	1
1-143	1901-034	SCREW, SET 3/8" X 3/4"	2301-0381	1
1-144	2301-008	WASHER, LOCK 1/2"	2301-0381	1
1-145	0502-018	END, ROD	2301-0381	1
1-146	2301-008	WASHER, LOCK 1/2"	2301-0381	1
1-147	1401-051	NUT, LOCK 1/2" SAE NF	2301-0381	1
1-148	1401-054	NUT, FULL 1/2" NF	2301-0381	1
1-149	1808-299	ROD, STEERING LINK	2301-0381	1
1-150	1401-054	NUT, FULL 1/2" NF	2301-0381	1
1-151	0502-018	END, ROD	2301-0381	1
1-152	0209-519	BOLT, 1/2" X 1 1/2" NF	2301-0381	1
1-153	2301-008	WASHER, LOCK 1/2"	2301-0381	1
1-154	1401-051	NUT, LOCK 1/2" SAE NF	2301-0381	1

ILLUSTRATED PARTS LIST

KEY	PART NUMBER	DESCRIPTION	USED ON CODE	QTY
1-155	1901-041	SCREW, SELF-TAP		2
1-156	2303-012	STEERING WHEEL		1
1-157	2301-096	WASHER, SPRING 5/8"		1
1-158	1401-050	NUT, JAM 1/2" SAE NF		1
1-159	0806-229	HOUSING, STEER. SHAFT		1
1-160	0209-009	BOLT, .312 X18 X .75		2
1-161	0605-459	FRAME	D,F	1
1-161A	0605-461	FRAME	C,E	1
1-161B	0605-458	FRAME	A	1
1-161C	0605-460	FRAME	B	1
1-162	0209-009	BOLT, .312 X18 X .75	A,B,C,E	2
1-163	1104-012	KNOB, 3/8"-16 THD.	A,B,C,E	1
1-164	0209-045	BOLT, .250-20 X 1.75	A,B,C,E	2
1-165	1401-020	NUT, 5/16" USS	A,B,C,E	2
1-166	2301-004	WASHER, LOCK 5/16"	A,B,C,E	2
1-167	0209-126	BOLT, 5/16" X 1 1/2" US	A,B,C,E	1
1-168	0214-491	BRKT., VALVE MOUNT	A,B,C,E	1
1-169	1913-286	SPACER, LEVER PIVOT	A,B,C,E	1
1-170	1604-162	PIN, CLEVIS, .187 X .81	A,B,C,E	2
1-171	1204-006	LINK, LIFT VALVE	A,B,C,E	1
1-172	1201-099	LEVER, WLDT, VALVE	A,B,C,E	1
1-173	2301-021	WASHER, 5/16 FLAT	A,B,C,E	1
1-174	2301-004	WASHER, LOCK 5/16	A,B,C,E	1
1-175	1401-020	NUT, 5/16 USS	A,B,C,E	1
1-176	1204-006	LINK, LIFT VALVE	A,B,C,E	1
1-177	1604-092	PIN COTTER, 1/16 X 1	A,B,C,E	2
1-178	0101-117	ADAPTOR	A,B,C,E	1
1-179	0812-050	HOSE	A,B,C,E	1
1-180	0101-117	ADAPTOR	A,B,C,E	1
1-181	0812-072	HOSE, LIFT CYL. 45"	A,B,C,E	1
1-182	1401-009	NUT, 1/4 LOCK	A,B,C,E	2
1-183	2201-037	CYLINDER ACTUATOR	A,B,C,E	1
1-184	0101-159	ADAPTOR 90 DEG.	A,B,C,E	1
1-185	0812-050	HOSE	A,B,C,E	1
1-186	0101-159	ADAPTOR, MALE 90 DEG.	A,B,C,E	1
1-187	0812-050	HOSE	A,B,C,E	1
1-188	1604-002	PIN, COTTER 3/32 " X 1"	A,B,C,E	1
1-189	0214-274	BRKT., LIFT CYLINDER	A,B,C,E	1
1-190	1604-063	PIN	A,B,C,E	1
1-191	1604-063	PIN	A,B,C,E	1

ILLUSTRATED PARTS LIST

KEY	PART NUMBER	DESCRIPTION	USED ON CODE	QTY
1-192	1604-002	PIN, COTTER 3/32" X 1"	A,B,C,E	1
1-193	0101-116	ADAPTOR	A,B,C,E	1
1-194	0319-002	CYLINDER	A,B,C,E	1
1-195	0101-118	ADAPTOR	A,B,C,E	1
1-196	0101-118	ADAPTOR	A,B,C,E	1
1-197	0215-182	BUSHING, STEERING		1
1-198	2003-006	TIRE, 18 X 9.5		1
1-199	1805-012	RIM BEADED		1
1-200	1102-002	KEY, 1/4" X 1/4" X 1"		1
1-201	0702-149	GEAR, WLDT STEERING		1
1-202	1916-012	SPRING, C/S LEVER	F	1
1-203	1604-038	PIN, COTTER 3/16" X 1"	F	1
1-204	1201-008	LEVER, C/S	F	1
1-205	0703-016	GRIP, SPONGE 7/8"	F	1
1-206	0307-002	CLAMP ASSEMBLY	F	1
1-207	1604-107	PIN	F	1
1-208	1604-002	PIN, COTTER 3/32" X 1"	F	1
1-209	1913-040	SPACER, 5/8" X 7/8"	F	1
1-210	1809-001	ROLLER, CABLE	F	1
1-211	1604-002	PIN, COTTER 3/32" X 1"	F	1
KEY	PART NUMBER	DESCRIPTION	USED ON CODE	QTY
2-1	1602-011	PEDAL		1
2-2	1601-001	PAD		1
2-3	1604-086	PIN, COTTER 3/32" X 1/2"		1
2-4	0209-114	BOLT, CAP 5/16" X 1" NC		1
2-5	0214-153	BACKET, BRAKE PEDAL		1
2-6	2301-004	WASHER, LOCK 5/16"		1
2-7	1401-020	NUT, 5/16" USS		1
2-8	2301-022	WASHR, FLAT 3/8"		1
2-9	1401-021	NUT, LCK 5/16" USS		1
2-10	0603-004	FITTING GREASE		1
2-11	1604-002	PIN, COTER 3/32" X 1"		1
2-12	0209-114	BOLT, CAP 5/16" X 1" NC		1
2-13	0501-019	ELBOW, DRAIN ASSY.		1
2-14	1606-038	PLUG, SQUARE 3/8"		1
2-15	0812-039	HOSE, OIL DRAIN		1
2-16	1401-020	NUT, 5/16" USS		1

ILLUSTRATED PARTS LIST

KEY	PART NUMBER	DESCRIPTION	USED ON CODE	QTY
2-17	2301-004	WASHER, LOCK 5/16"		1
2-18	1604-061	PIN, CLEVIS		1
2-19	2501-030	YOKE		1
2-20	1401-030	NUT, 3/8" USS		1
2-21	1808-300	ROD, BLADE ENGAGING		1
2-22	2301-004	WASHER, LOCK 5/16"		1
2-23	1401-020	NUT, 5/16" USS		1
2-24	0101-113	BUSHING, PIPE	A	1
2-25	1808-200	ROD, BRAKE HYDRO		2
2-26	2301-021	WASHER, FLAT 5/16"		2
2-27	1604-086	PIN, COTTER 3/32"X1/2"		2
2-28	0217-018	KIT, BRAKE DRUM		2
2-29	2305-022	WHEEL ASSEMBLY		2
2-30	1401-061	NUT, TAPERED 7/16"		10
2-31	1805-026	RIM, BEADED FRONT		2
2-32	2003-067	TIRE, 16 X 6.5		2
2-33	1604-086	PIN, COTTER 3/32"X1/2"		2
2-34	2301-021	WASHER, FLAT 5/16"		2
2-35	2501-027	YOKE		2
2-36	1604-013	PIN, 5/16" X 1 1/4" R		2
2-37	0209-350	BOLT, 3/8" X 2 1/2" NC HH		4
2-38	1401-020	NUT, 5/16" USS		2
2-39	2301-004	WASHER, LOCK 5/16"		2
2-40	0704-367	GUARD, OIL FILTER		1
2-41	1604-086	PIN, COTTER 3/32"X1/2"		1
2-42	2301-002	WASHER, FLAT 5/16"		1
2-43	2301-006	WASHER, LOCK 3/8"		4
2-44	1401-030	NUT, 3/8" USS		4
2-45	1401-069	NUT, JAM 5/8"		2
2-46	2301-011	WASHER STAR		2
2-47	0209-617	BOLT		2
2-48	1916-116	SPRING		1
2-49	0212-003	BOLT, EYE 3/16" X 2"		1
2-50	1401-002	NUT, LOCK 3/16"-24		1
2-51	0102-134	ARM, ENGAGING ASSY.		1
2-52	0204-019	BEARING, HUB 5/8" ID		1
2-53	1608-148	PULLEY, ENGINE IDLER		1
2-54	0204-019	BEARING, HUB 5/8" ID		1
2-55	1401-072	NUT, FLEX LOCK 5/8" SAE		1
2-56	1401-030	NUT, 3/8" USS		1

ILLUSTRATED PARTS LIST

KEY	PART NUMBER	DESCRIPTION	USED ON CODE	QTY
2-57	1604-103	PIN, BRAKE BAND		1
2-58	0205-528	BELT, DRIVE	A,B	1
2-58A	0205-137	BELT, DRIVE	C,D	1
2-59	0205-528	BELT, DRIVE	C,D,E,F	1
2-59A	0205-137	BELT, DRIVE	A,B	1
2-60	0215-175	BUSHING		1
2-61	1102-058	KEY, 1/4" X 1/4" X 4"		1
2-62	0209-021	BOLT, 1/4" X 3/4" USS		4
2-63	1608-394	PULLEY, PTO		1
2-64	1901-136	SCREW, SET 5/16" X 1"		1
2-65	0205-534	BELT, PUMP	A,C,D,E,F	1
2-65A	0205-537	BELT, PUMP	B	1
2-66	1901-136	SCREW, SET 5/16" X 1"		1
2-67	1604-086	PIN, COTTER 3/32" X 1/2"		1
2-68	0217-020	BRAKE, BAND		1
2-69	1604-086	PIN COTTER 3/32" X 1/2"		1
2-70	1806-008	RING, SNAP		1
2-71	0214-276	BRACKET, BRAKE BAND		1
2-72	1904-191	SHAFT, PULLEY PTO		1
2-73	1401-032	NUT, 3/8" SAE		1
2-74	1916-174	SPRING		1
2-75	1401-072	NUT, LOCK 5/8" SAE		1
2-76	0603-004	FITTING, GREASE		1
2-77	0209-341	BOLT, 3/8" X 2" NF		1
2-78	1401-051	NUT, LOCK FULL 1/2" NF		1
2-79	0209-108	BOLT, 5/16" X 3/4" USS		1
2-80	1608-365	PULLEY, PLASTIC IDLER		1
2-81	0209-517	BOLT, 1/2" X 2" NF		1
2-82	1913-200	SPACER, 1 1/8" X 7/8"		1
2-83	1401-070	NUT, JAM 5/8" SAE		1
2-84	1913-040	SPACER		2
2-85	1913-040	SPACER		2
2-86	0215-177	BUSHING		1
2-87	0102-133	ARM, IDLER ASSEMBLY		1
2-88	1913-095	SPACER		1
2-89	1916-161	SPRING		1
2-90	1401-020	NUT, 5/16" USS		1
2-91	1604-086	PIN, COTTER 3/32" X 1/2"		1
2-92	1916-177	SPRING, SMALL		1
2-93	1604-160	PIN, ROLL 16MM X 35MM		1

ILLUSTRATED PARTS LIST

KEY	PART NUMBER	DESCRIPTION	USED ON CODE	QTY
2-94	0209-049	BOLT, 1/4" X 1"		1
2-95	2301-020	WASHER, FLAT 1/4"		1
2-96	0214-467	BRACKET, ACTUATOR		1
2-97	1806-008	RING, SNAP		1
2-98	0214-453	BRKT., NEUT. RETAINER		1
2-99	0214-453	BRKT., NEUT. RETAINER		1
2-100	0102-135	ARM, FWD./REV.		1
2-101	1401-002	NUT, LOCK 3/16"-24		1
2-102	2301-001	WASHER, LOCK 3/16"		1
2-103	2301-003	WASHER, LOCK 1/4"		1
2-104	1401-010	NUT, 1/4" USS		1
2-105	1401-030	NUT, 3/8" USS		1
2-106	0209-026	BOLT, 1/4"-20 X 1.00		1
2-107	0102-149	ARM, BYPASS VALVE		1
2-108	1401-010	NUT, 1/4"-20		1
2-109	1401-001	NUT, #10-24		1
2-110	2301-001	WASHER, LOCK 3/16"		1
2-111	2301-005	WASHER, START 5/16"		1
2-112	1401-010	NUT, 1/4"-20		1
2-113	0307-004	CLAMP, CABLE		1
2-114	1901-229	SCREW, #10-24 X 1/2"		1
2-115	0209-021	BOLT, 1/4" X 3/4" USS		2
2-116	2301-003	WASHER, LOCK 1/4"		2
2-117	2301-020	WASHER, FLAT 1/4"		2
2-118	0612-006	FAN, BLOWER (EATON)		1
2-119	1901-006	SCREW, SET 5/16" X 1"		1
2-120	1608-407	PULLEY, TRANSMISSION		1
2-121	1102-059	KEY, 5MM X 1.250		1
2-122	2301-020	WASHER, FLAT 1/4"		2
2-123	0209-161	BOLT, 5/16" X 3"		2
2-124	0209-831	BOLT, 5/16" X 5 1/4" NC		2
2-125	2301-020	WASHER, FLAT 1/4"		2
2-126	2006-077	TRANS., BDU21L-310 (P/O ITEM 2-128)		1
2-127	1902-073	O-RING		1
2-128	2006-078	ASSY., HYDRO. TRANS.		1
2-129	1601-004	PAD, FOOT 6" X 12"		1
2-130	0215-183	BUSHING, STD PIPE THD.		1
2-131	0101-158	ADAPTOR		1
2-132	0315-012	CUP, OIL BREATHING		1

ILLUSTRATED PARTS LIST

KEY	PART NUMBER	DESCRIPTION	USED ON CODE	QTY
2-133	0209-834	BOLT		1
2-134	2301-296	WASHER, FLAT 3/16"		1
2-135	0101-154	FITTING, HOSE		1
2-136	1806-145	O-RING		1
2-137	0307-039	CLAMP, HOSE		1
2-138	0812-067	HOSE		1
2-139	0307-039	CLAMP, HOSE		1
2-140	0101-153	FITTING, HOSE		1
2-141	0101-155	ADAPTOR		1
2-142	0610-018	FILTER, TRANS. OIL		1
2-143	1808-283	ROD, DIRECT. CONT.		1
2-144	1401-032	NUT, 3/8" SAE		1
2-145	0502-017	END, ROD		1
2-146	1401-020	NUT, 5/16" USS		1
2-147	1401-021	NUT, LOCK 5/16" USS		1
2-148	1602-024	PEDAL, DIRECT. CONTROL		1
2-149	1601-017	PAD, HYDRO PEDAL		1
2-150	0209-181	BOLT, 5/16" X 3 3/4"		1
2-151	1401-032	NUT, 3/8" SAE		1
2-152	1604-157	PIN, SWITCH		1
2-153	0209-350	BOLT, 3/8"-16 X 2 1/2"		1
2-154	0100-008	ACTUATOR, SWITCH		1
2-155	1401-030	NUT, 3/8" USS		1
2-156	1401-020	NUT, 5/16" USS		1
2-157	1401-020	NUT, 5/16" USS		1
2-158	0209-114	BOLT, CAP 5/16" X 1" NC		1
2-159	1916-175	SPRING		1
2-160	1901-229	SCREW		2
2-161	1923-025	SWITCH		1
2-162	2301-001	WASHER, LOCK 3/16"		2
2-163	1401-001	NUT, 3/16" USS		2
2-164	0214-493	BRACKET, SWITCH		1
2-165	2301-004	WASHER, LOCK 5/16"		1
2-166	1401-020	NUT, 5/16" USS		1
2-167	0209-138	BOLT, 5/16" X 2"		1
2-168	2501-027	YOKE		1
2-169	1401-020	NUT, 5/16" USS		1
2-170	1808-150	ROD		1
2-171	1604-086	PIN, COTTER 3/32" X 1/2"		1

ILLUSTRATED PARTS LIST

KEY	PART NUMBER	DESCRIPTION	USED ON CODE	QTY
2-172	2301-021	WASHER, FLAT 5/16"		1
2-173	0209-114	BOLT, CAP 5/16" X 1" NC		1
2-174	2301-021	WASHER, FLAT 5/16"		1
2-175	0214-206	BRACKET		1
2-176	1401-030	NUT, 3/8" USS		1
2-177	2301-006	WASHER, LOCK 3/8"		1
2-178	0209-009	BOLT		1
2-179	0209-114	BOLT, CAP 5/16" X 1" NC		2
2-180	1401-010	NUT, 1/4" USS		1
2-181	1401-010	NUT, 1/4" USS		1
2-182	0209-050	BOLT, 1/4" X 2"		1
2-183	1916-012	SPRING		1
2-184	1401-021	NUT, LOCK 5/16" USS		1
2-185	0209-108	BOLT, 5/16" X 3/4" USS		1
2-186	0217-012	BRAKE LOCKING LATCH		1
2-187	1913-240	SPACER, IDLER PULLEY		1
2-188	1913-040	SPACER		4
KEY	PART NUMBER	DESCRIPTION	USED ON CODE	QTY
3-1	0209-835	BOLT, 5/16"-18 X 2"	B	4
3-2	P/O ITEM 3-13	NUT	B	1
3-3	P/O ITEM 3-13	WASHER, FLAT	B	1
3-4	0307-026	CLAMP, HOSE	B	1
3-5	0812-076	HOSE, FUEL 1" X 26"	B	1
3-6	0307-026	CLAMP, HOSE	B	1
3-7	0812-027	HOSE, FUEL 1/4" X 17.5"	B	1
3-8	0307-026	CLAMP, HOSE	B	1
3-9	0610-011	FILTER, FUEL	B	1
3-10	0307-026	CLAMP, HOSE	B	1
3-11	0812-077	HOSE, FUEL 1/4" X 12"	B	1
3-12	0307-026	CLAMP, HOSE	B	1
3-13	2201-030	VALVE, FUEL SHUTOFF	B	1
3-14	0307-026	CLAMP, HOSE	B	1
3-15	0812-076	HOSE, TANK-TO VALVE	B	1
3-16	0307-026	CLAMP, HOSE	B	1
3-17	1918-022	STRAP, TANK MOUNT	B	4
3-18	2001-023	TANK, FUEL	B	2
3-19	0214-455	BRKT., TANK MOUNT L.H.	B	1
3-19A	0214-466	BRKT., TANK MOUNT R.H.	B	1

ILLUSTRATED PARTS LIST

KEY	PART NUMBER	DESCRIPTION	USED ON CODE	QTY
3-20	1811-004	GROMMET, RUBBER	B	2
3-21	2301-021	WASHER, FLAT 5/16"	B	2
3-22	0209-114	BOLT, CAP 5/16" X 1" NC	B	2
3-23	1401-020	NUT, 5/16" USS	B	4
3-24	2301-004	WASHER, LOCK 5/16"	B	4
3-25	0209-032	BOLT, 1/4" X 1"	B	4
3-26	2301-003	WASHER, LOCK 1/4"	B	4
3-27	1401-010	NUT, 1/4" USS	B	4
3-28	2301-004	WASHER, LOCK 5/16"	B	2
3-29	1401-020	NUT, LOCK 5/16"	B	2
3-30	0214-482	BRKT., LH TANK MTG.	B	1
3-31	NOT USED			
3-32	NOT USED			
3-33	NOT USED			
3-34	1401-020	NUT, 5/16" USS	B	1
3-35	2301-004	WASHER, LOCK 5/16"	B	1
3-36	0301-140	CABLE, BAT. BLA. (NEG)	B	1
3-37	1401-197	NUT, BRASS	B	2
3-38	2301-001	WASHER, LOCK 3/16"	B	2
3-39	1923-045	STARTER SOLENOID	B	1
3-40	0301-141	CABLE, BAT. RED (POS)	B	1
3-41	2301-004	WASHER, LOCK 5/16"	B	1
3-42	1401-020	NUT, 5/16" USS	B	1
3-43	0209-021	BOLT, 1/4" X 3/4"	B	2
3-44	2301-003	WASHER, LOCK 1/4"	B	2
3-45	1401-010	NUT, 1/4" USS	B	2
3-46	0209-517	BOLT, 1/2" X 2" NF	B	4
3-47	0811-045	HARNESS, WIRING	B	1
3-48	0307-026	CLAMP, HOSE	B	1
3-49	E255	ENGINE	B	1
3-50	2301-008	WASHER, LOCK 1/2"	B	4
3-51	1401-054	NUT, 1/2" USS	B	4
3-52	1401-030	NUT, 3/8" USS	B	1
3-53	2301-006	WASHER, LOCK 3/8"	B	1
3-54	0214-481	BRKT., RH TANK MTG.	B	1
3-55	0301-035	CABLE, RELIEF VALVE	B	1
3-56	1901-136	SCREW, SET 5/16" X 1"	B	1
3-57	1401-020	NUT, 5/16" USS	B	1
3-58	1102-024	KEY, 3/8"X3/8"X3"	B	1
3-59	1401-020	NUT, 5/16" USS	B	1

ILLUSTRATED PARTS LIST

KEY	PART NUMBER	DESCRIPTION	USED ON CODE	QTY
3-60	1901-136	SCREW, SET 5/16" X 1"	B	1
3-61	1608-406	PULLEY, ENGINE	B	1
3-62	1401-020	NUT, 5/16" USS	B	1
3-63	2301-004	WASHER, LOCK 5/16	B	1
3-64	0209-120	BOLT, CAP 5/16" X 1 1/4"	B	1
3-65	1304-004	MUFFLER	B	1
3-66	0307-011	CLAMP	B	1
3-67	0503-028	EXTENSION, NIPPLE	B	1
3-68	P/O ITEM 3-66	CLAMP	B	1
3-69	P/O ITEM 3-66	NUT	B	1
3-70	P/O ITEM 3-66	NUT	B	1
3-71	0301-140-001	CAP, BATTERY, BLACK	B	1
3-72	0301-141-001	CAP, BATTERY, RED	B	1
3-73	0301-139	CABLE	B	1
KEY	PART NUMBER	DESCRIPTION	USED ON CODE	QTY
3A-1	0209-835	BOLT, 5/16"-18 X 2"	C,D,E,F	4
3A-2	P/O ITEM 3A-13	NUT	C,D,E,F	1
3A-3	P/O ITEM 3A-13	WASHER, FLAT	C,D,E,F	1
3A-4	0307-026	CLAMP, HOSE	C,D,E,F	1
3A-5	0812-076	HOSE, FUEL 1" X 26"	C,D,E,F	1
3A-6	0307-026	CLAMP, HOSE	C,D,E,F	1
3A-7	0812-025	HOSE, FUEL 1/4" X 2.5"	C,D,E,F	1
3A-8	0307-026	CLAMP, HOSE	C,D,E,F	1
3A-9	0610-011	FILTER, FUEL	C,D,E,F	1
3A-10	0307-026	CLAMP, HOSE	C,D,E,F	1
3A-11	0812-077	HOSE, FUEL 1/4" X 12"	C,D,E,F	1
3A-12	0307-026	CLAMP, HOSE	C,D,E,F	1
3A-13	2201-030	VALVE, FUEL SHUTOFF	C,D,E,F	1
3A-14	0307-026	CLAMP, HOSE	C,D,E,F	1
3A-15	0812-076	HOSE, TANK-TO VALVE	C,D,E,F	1
3A-16	0307-026	CLAMP, HOSE	C,D,E,F	1
3A-17	1918-022	STRAP, TANK MOUNT	C,D,E,F	4
3A-18	2001-023	TANK, FUEL	C,D,E,F	2
3A-19	0214-455	BRKT., TANK MOUNT L.H.	C,D,E,F	1
3B-19A	0214-466	BRKT., TANK MOUNT R.H.	C,D,E,F	1
3A-20	1811-004	GROMMET, RUBBER	C,D,E,F	2
3A-21	2301-021	WASHER, FLAT 5/16"	C,D,E,F	2

ILLUSTRATED PARTS LIST

KEY	PART NUMBER	DESCRIPTION	USED ON CODE	QTY
3A-22	0209-114	BOLT, CAP 5/16" X 1" NC	C,D,E,F	2
3A-23	1401-020	NUT, 5/16" USS	C,D,E,F	4
3A-24	2301-004	WASHER, LOCK 5/16"	C,D,E,F	4
3A-25	0209-032	BOLT, 1/4" X 1"	C,D,E,F	4
3A-26	2301-003	WASHER, LOCK 1/4"	C,D,E,F	4
3A-27	1401-010	NUT, 1/4" USS	C,D,E,F	4
3A-28	2301-004	WASHER, LOCK 5/16"	C,D,E,F	2
3A-29	1401-020	NUT, LOCK 5/16"	C,D,E,F	2
3A-30	0214-475	BRKT., LH TANK MTG.	C,D,E,F	1
3A-31	0209-114	BOLT, CAP 5/16" X 1"	C,D,E,F	1
3A-32	2301-004	WASHER, LOCK 5/16"	C,D,E,F	1
3A-33	1401-020	NUT, 5/16" USS	C,D,E,F	1
3A-34	1401-020	NUT, 5/16" USS	C,D,E,F	1
3A-35	2301-004	WASHER, LOCK 5/16"	C,D,E,F	1
3A-36	0301-140	CABLE, BAT. BLA. (NEG)	C,D,E,F	1
3A-37	1401-197	NUT, BRASS	C,D,E,F	2
3A-38	2301-001	WASHER, LOCK 3/16"	C,D,E,F	2
3A-39	1923-045	STARTER SOLENOID	C,D,E,F	1
3A-40	0301-141	CABLE, BAT. RED (POS)	C,D,E,F	1
3A-41	2301-004	WASHER, LOCK 5/16"	C,D,E,F	1
3A-42	1401-020	NUT, 5/16" USS	C,D,E,F	1
3A-43	0209-021	BOLT, 1/4" X 3/4"	C,D,E,F	2
3A-44	2301-003	WASHER, LOCK 1/4"	C,D,E,F	2
3A-45	1401-010	NUT, 1/4" USS	C,D,E,F	2
3A-46	0209-331	BOLT, 3/8" X 1 3/4" NC	C,D,E,F	1
3A-46A	0209-326	BOLT, 3/8" X 1 1/2" NC	C,D,E,F	3
3A-47	0811-044	HARNESS, WIRING	C,D,E,F	1
3A-48	0307-026	CLAMP, HOSE	C,D,E,F	1
3A-49	E245	ENGINE	C,D,E,F	1
3A-50	2301-006	WASHER, LOCK 3/8"	C,D,E,F	4
3A-51	1401-030	NUT, 3/8" USS	C,D,E,F	4
3A-52	1401-030	NUT, 3/8" USS	C,D,E,F	1
3A-53	2301-006	WASHER, LOCK 3/8"	C,D,E,F	1
3A-54	0214-494	BRKT., RH TANK MTG.	C,D,E,F	1
3A-55	0301-035	CABLE, RELIEF VALVE	C,D,E,F	1
3A-56	1901-136	SCREW, SET 5/16" X 1"	C,D,E,F	1
3A-57	1401-020	NUT, 5/16" USS	C,D,E,F	1
3A-58	1102-058	KEY, 1/4" X 1/4" X 4"	C,D,E,F	1
3A-59	1401-020	NUT, 5/16" USS	C,D,E,F	1
3A-60	1901-136	SCREW, SET 5/16" X 1"	C,D,E,F	1

ILLUSTRATED PARTS LIST

KEY	PART NUMBER	DESCRIPTION	USED ON CODE	QTY
3A-61	1608-405	PULLEY, ENGINE	C,D,E,F	1
3A-62	1401-020	NUT, 5/16" USS	C,D,E,F	1
3A-63	2301-004	WASHER, LOCK 5/16	C,D,E,F	1
3A-64	0209-114	BOLT, CAP 5/16" X 1"	C,D,E,F	1
3A-65	1304-016	MUFFLER	C,D,E,F	1
3A-66	0307-033	CLAMP	C,D,E,F	1
3A-67	1901-171	SCREW, 5/16" X 3/4"	C,D,E,F	2
3A-68	1901-171	SCREW, 5/16" X 3/4"	C,D,E,F	2
3A-69	0301-140-001	CAP, BATTERY BLACK	C,D,E,F	1
3A-70	0301-141-001	CAP, BATTERY, RED	C,D,E,F	1
3A-73	0301-115	CABLE	C,D,E,F	1
KEY	PART NUMBER	DESCRIPTION	USED ON CODE	QTY
3B-1	0209-835	BOLT, 5/16"-18 X 2"	A	4
3B-2	P/O ITEM 3B-13	NUT	A	1
3B-3	P/O ITEM 3B-13	WASHER, FLAT	A	1
3B-4	0307-026	CLAMP, HOSE	A	1
3B-5	0812-076	HOSE, FUEL 1" X 26"	A	1
3B-6	0307-026	CLAMP, HOSE	A	1
3B-7	0812-025	HOSE, FUEL 1/4" X 2.5"	A	1
3B-8	0307-026	CLAMP, HOSE	A	1
3B-9	0610-011	FILTER, FUEL	A	1
3B-10	0307-026	CLAMP, HOSE	A	1
3B-11	0812-077	HOSE, FUEL 1/4" X 12"	A	1
3B-12	0307-026	CLAMP, HOSE	A	1
3B-13	2201-030	VALVE, FUEL SHUTOFF	A	1
3B-14	0307-026	CLAMP, HOSE	A	1
3B-15	0812-076	HOSE, TANK-TO VALVE	A	1
3B-16	0307-026	CLAMP, HOSE	A	1
3B-17	1918-022	STRAP, TANK MOUNT	A	4
3B-18	2001-023	TANK, FUEL	A	2
3B-19	0214-455	BRKT., TANK MOUNT L.H.	A	1
3B-19A	0214-466	BRKT., TANK MOUNT R.H.	A	1
3B-20	1811-004	GROMMET, RUBBER	A	2
3B-21	2301-021	WASHER, FLAT 5/16"	A	2
3B-22	0209-114	BOLT, CAP 5/16" X 1" NC	A	2
3B-23	1401-020	NUT, 5/16" USS	A	4
3B-24	2301-004	WASHER, LOCK 5/16"	A	4
3B-25	0209-032	BOLT, 1/4" X 1"	A	4

ILLUSTRATED PARTS LIST

KEY	PART NUMBER	DESCRIPTION	USED ON CODE	QTY
3B-26	2301-003	WASHER, LOCK 1/4"	A	4
3B-27	1401-010	NUT, 1/4" USS	A	4
3B-28	2301-004	WASHER, LOCK 5/16"	A	2
3B-29	1401-020	NUT, LOCK 5/16"	A	2
3B-30	0214-495	BRKT., LH TANK MTG.	A	1
3B-31	0209-517	BOLT, 1/2" X 2" NF	A	2
3B-32	2301-008	WASHER, LOCK 1/2"	A	2
3B-33	1401-054	NUT, 1/2" FULL	A	2
3B-34	1401-020	NUT, 5/16" USS	A	1
3B-35	2301-004	WASHER, LOCK 5/16"	A	1
3B-36	0301-140	CABLE, BAT. BLA. (NEG)	A	1
3B-37	1401-197	NUT, BRASS	A	2
3B-38	2301-001	WASHER, LOCK 3/16"	A	2
3B-39	1923-045	STARTER SOLENOID	A	1
3B-40	0301-141	CABLE, BAT. RED (POS)	A	1
3B-41	2301-004	WASHER, LOCK 5/16"	A	1
3B-42	1401-020	NUT, 5/16" USS	A	1
3B-43	0209-021	BOLT, 1/4" X 3/4"	A	2
3B-44	2301-003	WASHER, LOCK 1/4"	A	2
3B-45	1401-010	NUT, 1/4" USS	A	2
3B-46	0209-519	BOLT, 1/2" X 1 1/2" NF	A	2
3B-47	0811-043	HARNESS, WIRING	A	1
3B-48	0307-026	CLAMP, HOSE	A	1
3B-49	E229	ENGINE	A	1
3B-50	2301-008	WASHER, LOCK 1/2"	A	4
3B-51	1401-054	NUT, 1/2" FULL	A	4
3B-52	1401-030	NUT, 3/8" USS	A	1
3B-53	2301-006	WASHER, LOCK 3/8"	A	1
3B-54	0214-470	BRKT., RH TANK MTG.	A	1
3B-55	0301-035	CABLE, RELIEF VALVE	A	1
3B-56	1901-136	SCREW, SET 5/16" X 1"	A	1
3B-57	1401-020	NUT, 5/16" USS	A	1
3B-58	1102-024	KEY, 3/8" X 3/8" X 3"	A	1
3B-59	1401-020	NUT, 5/16" USS	A	1
3B-60	1901-136	SCREW, SET 5/16" X 1"	A	1
3B-61	1608-406	PULLEY, ENGINE	A	1
3B-62	1401-020	NUT, 5/16" USS	A	1
3B-63	2301-004	WASHER, LOCK 5/16"	A	1
3B-64	0209-114	BOLT, CAP 5/16" X 1"	A	1
3B-65	1304-024	MUFFLER	A	1

ILLUSTRATED PARTS LIST

KEY	PART NUMBER	DESCRIPTION	USED ON CODE	QTY
3B-66	0209-314	BOLT, 3/8" X 1" NC	A	3
3B-67	0603-028	FLANGE, MUFFLER	A	1
3B-68	0701-088	GASKET, EXHAUST	A	1
3B-69	0603-027	FLANGE, MUFFLER	A	1
3B-70	2301-006	WASHER, LOCK 3/8"	A	3
3B-71	1401-030	NUT, 3/8" USS	A	3
3B-72	0307-012	CLAMP, MUFFLER ASSY.	A	1
3B-73	0501-014	ELBOW, 90 DEGREE	A	1
3B-74	0307-012	CLAMP, MUFFLER ASSY.	A	1
3B-75	0704-336	GUARD, MUFFLER	A	1
3B-76	2301-004	WASHER, LOCK 5/16"	A	2
3B-77	1401-020	NUT, 5/16" USS	A	2
3B-78	0301-141-001	CAP, BAT., RED (POS)	A	1
3B-79	0301-140-001	CAP, BAT., BLACK (NEG)	A	1
3B-80	0301-115	CABLE	A	1
KEY	PART NUMBER	DESCRIPTION	USED ON CODE	QTY
4-1	1913-283	SPACER, TRANSMISSION		1
4-2	1806-144	RING, SNAP		1
4-3	0702-148	GEAR, MITRE		1
4-4	0204-040	BEARING, BALL		1
4-5	1913-268	SPACER, TRANSAXLE		1
4-6	0702-147	GEAR, MITRE		1
4-7	1904-154	SHAFT, INTERNAL DRIVE		1
4-8	0702-057	GEAR, TRANSMISSION		1
4-9	0204-040	BEARING, BALL		1
4-10	0315-012	CUP, OIL BREATHER		1
4-11	1904-154	SHAFT, INTERNAL DRIVE		1
4-12	0204-040	BEARING, BALL		1
4-13	0702-053	GEAR, TRANSMISSION		1
4-14	1913-268	SPACER, TRANSAXLE		1
4-15	0702-052	GEAR, TRANSMISSION		1
4-16	1913-269	SPACER, TRANSAXLE		1
4-17	0204-040	BEARING, BALL		1
4-18	0304-157	CASE, HALF, DEEP		1
4-19	0701-022	GASKET		1
4-20	0806-336	HOUSING, AXLE		1
4-21	0209-307	BOLT, 3/8" X 3/4" NC		6

ILLUSTRATED PARTS LIST

KEY	PART NUMBER	DESCRIPTION	USED ON CODE	QTY
4-22	2301-006	WASHER, LOCK 3/8"		6
4-23	1102-013	KEY, WOODRUFF		1
4-24	1606-070	PLUG, DRAIN		1
4-25	0103-112	AXLE, SHORT <i>10 spline 103-081</i>		1
4-26	0204-039	BEARING, DIFFERENTIAL		1
4-27	0702-054	GEAR, TRANSMISSION		1
4-28	2301-006	WASHER, LOCK 3/8"		2
4-29	0209-318	BOLT, 3/8" X 1" NF HE		2
4-30	1913-034	SPACER, DIFFERENTIAL		1
4-31	0204-039	BEARING, DIFFERENTIAL		1
4-32	0304-156	CASE, HALF, SHALLOW		1
4-33	0209-120	BOLT, 5/16" X 1"		17
4-34	0701-022	GASKET		1
4-35	0806-091	HOUSING, AXLE LONG		1
4-36	2301-006	WASHER, LOCK 3/8"		6
4-37	0209-307	BOLT, 3/8" X 3/4" NC		6
4-38	403-003	DIFFERENTIAL		1
4-39	1401-071	NUT, FULL 5/8" SAE		10
4-40	2301-096	WASHER, CUP 5/8"		10
4-41	1806-001	O-RING, 1/4" X 1"		2
4-42	0807-036	HUB, DRIVE WHEEL		2
4-43	1902-012	SEAL, AXLE		2
4-44	1902-012	SEAL, AXLE		2
4-45	1207-025	RING, LOCK		2
4-46	0204-038	BEARING, AXLE		2
4-47	1102-013	KEY, WOODRUFF		1
4-48	0103-090	AXLE, LONG <i>20 spline 103-082</i>		1
4-49	0701-103	GASKET, CASE		1
4-50	2301-004	WASHER, LOCK 5/16"		17
4-51	1401-020	NUT, 5/16" USS		17
4-52	1401-128	NUT, CONDUIT 1/2"		1
4-53	215-183	BUSHING		1
4-54	NOT USED			
4-55	0204-159	BEARING, BALL		1

ILLUSTRATED PARTS LIST

KEY	PART NUMBER	DESCRIPTION	USED ON CODE	QTY
5-1	1201-095	ASSY, PARK. BR. LEVER		2
5-2	1906-015	SHIELD, DUST		2
5-3	1901-216	ASSY., ADJ. SCREW NUT		2
5-4	1916-145	SPRING, ADJ. SCREW (BLUE)		2
5-5	1908-013	ASSY., SHOE AND LINING		2
5-6	1908-012	ASSY., SHOE AND LINING		2
5-7	1604-133	RETAINER, LEVER PIN		2
5-8	1916-144	SPRING, SHOE RET. (RH) RED		2
5-9	1604-133	RETAINER, LEVER PIN		2
5-10	1916-143	SPRING, SHOE RET. (LH) GRN.		2
5-11	1935-003	TORQUE SPIDER, FINISHED		2
5-12	1401-020	NUT, 5/16" USS		8
5-13	2301-004	WASHER, LOCK 5/16"		8
5-14	0209-120	BOLT, 5/16" X 1 1/4"		8
KEY	PART NUMBER	DESCRIPTION	USED ON CODE	QTY
6-1	0401-136	DECAL, BRAKE		1
6-2	0401-368	DECAL, INSTR. PANEL	A,C,D,E,F	1
6-2A	0401-369	DECAL, INSTR. PANEL	B	1
6-3	0401-370	DECAL, INSTR. PANEL	A,B,C,E	1
6-3A	0401-371	DECAL, INSTR. PANEL	D,F	1
6-4	0401-358	DECAL, GASOLINE		2
6-5	13-10021-00 WEASLER	DECAL, ROT. DRIVELINE		1
6-6	0401-111	DECAL, DANGER, BLADE		2
6-7	0401-221	DECAL, ANSI B71.4 STD.		1
6-8	0401-110	DECAL, CHUTE GUARD		1
6-9	0401-367	DECAL, GRD. SPD. CONT.		1

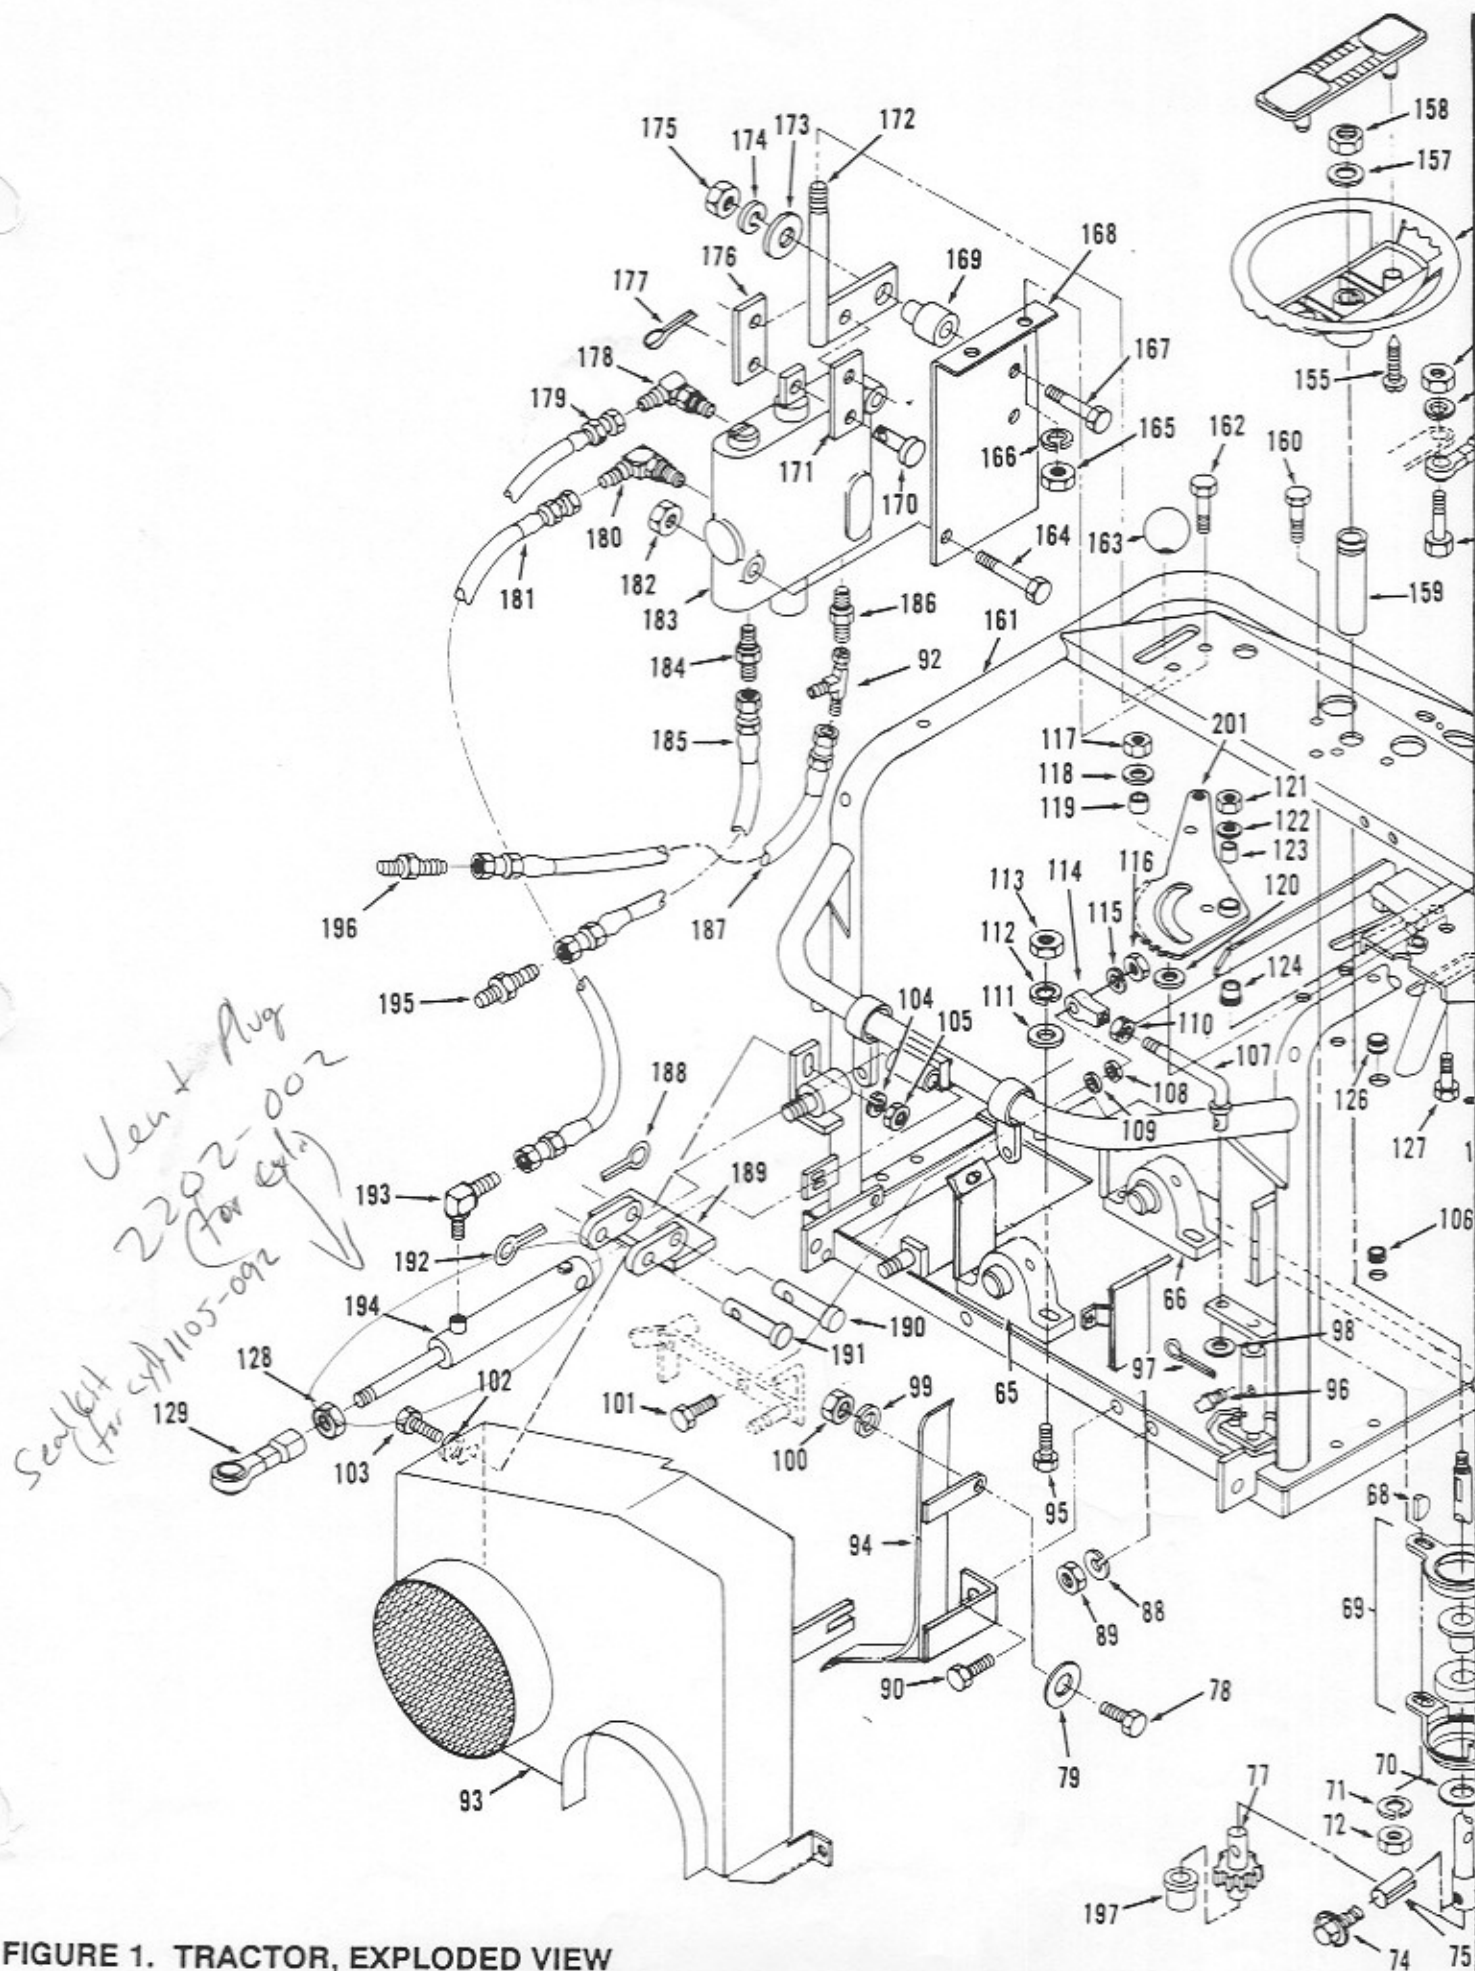


FIGURE 1. TRACTOR, EXPLODED VIEW

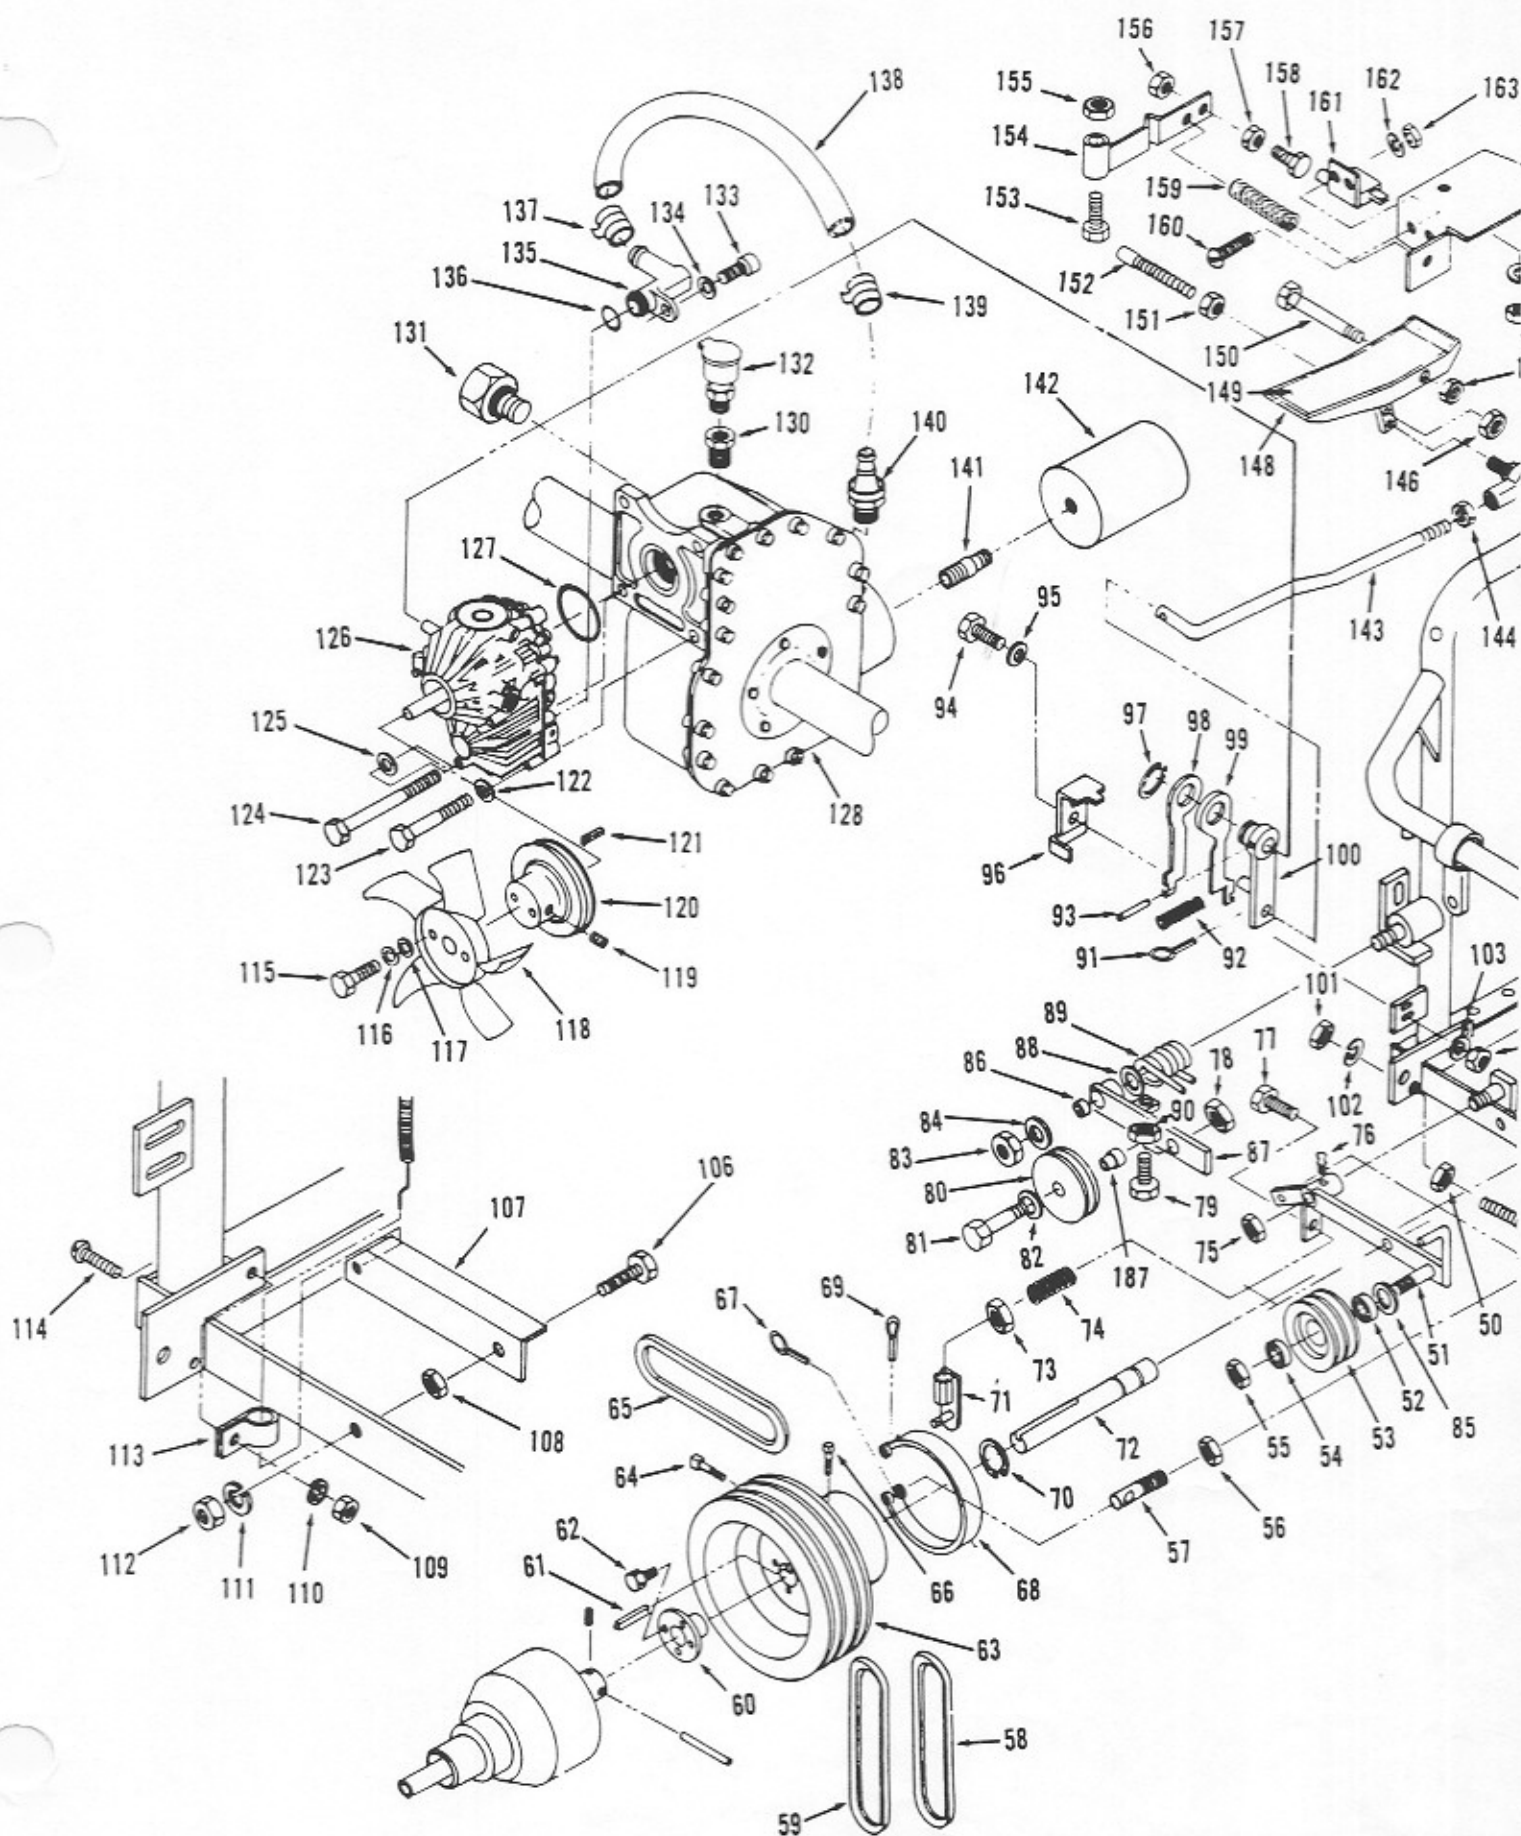
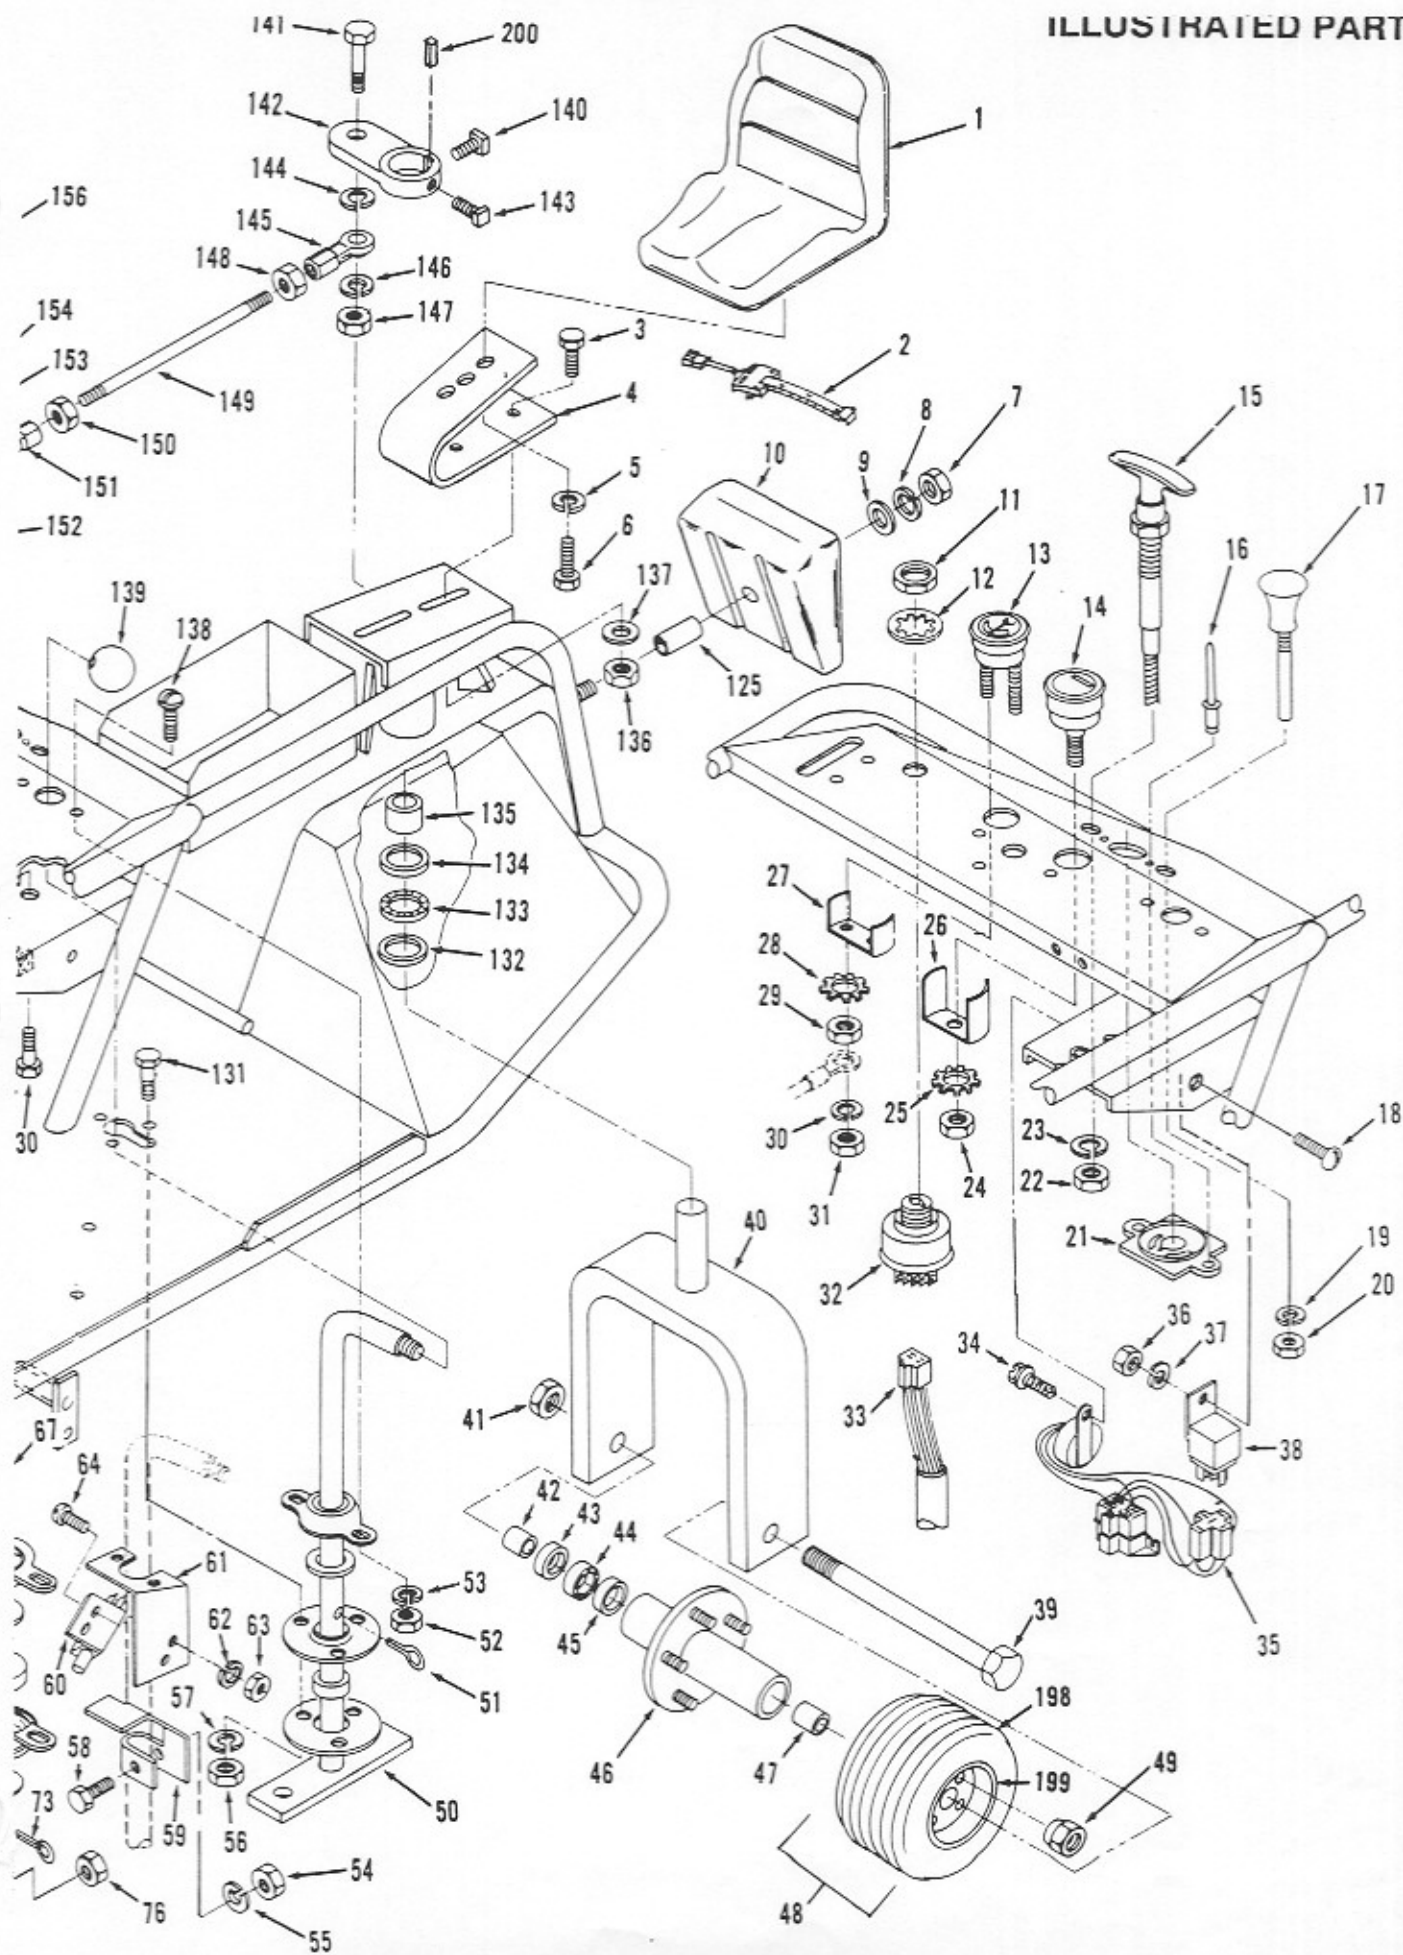


FIGURE 2. TRACTOR. EXPLODED VIEW

ILLUSTRATED PARTS LIST



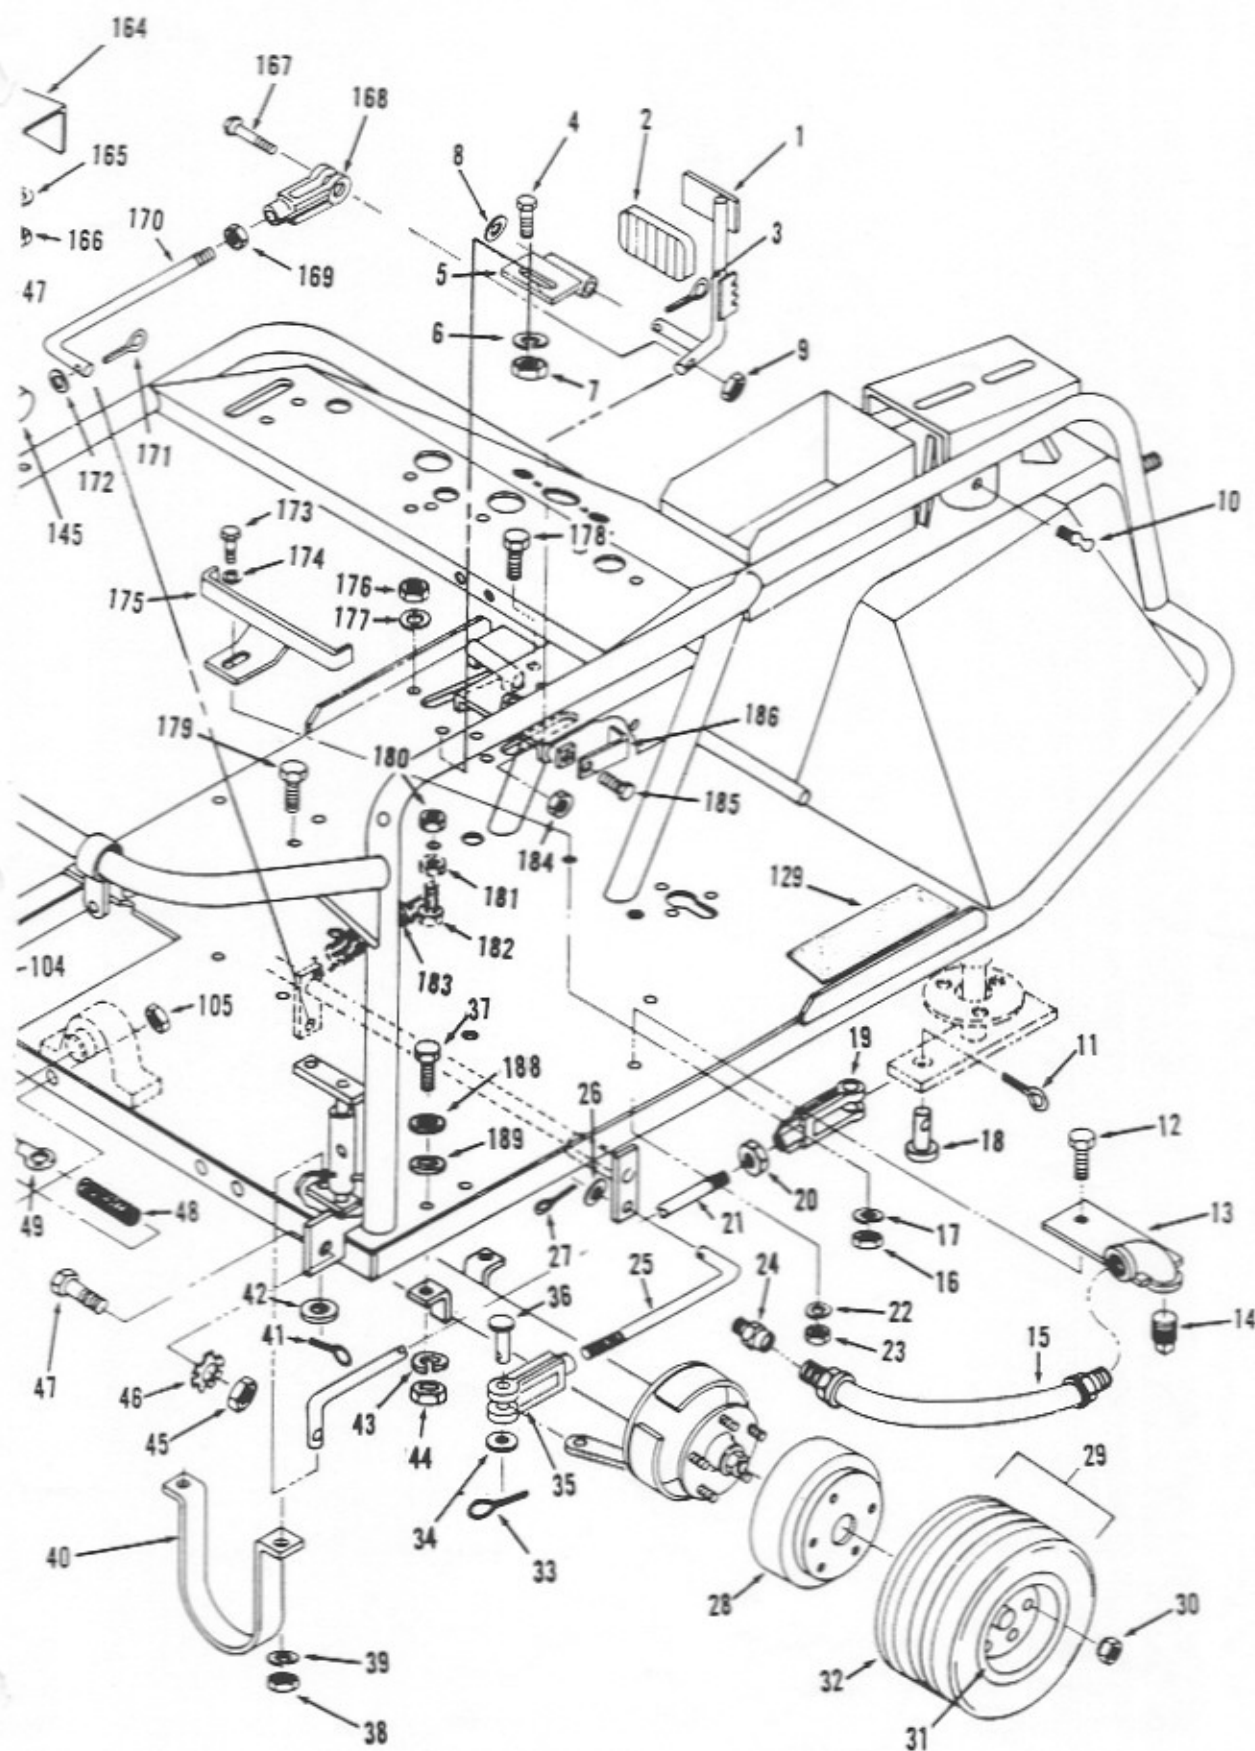


Figure 2B

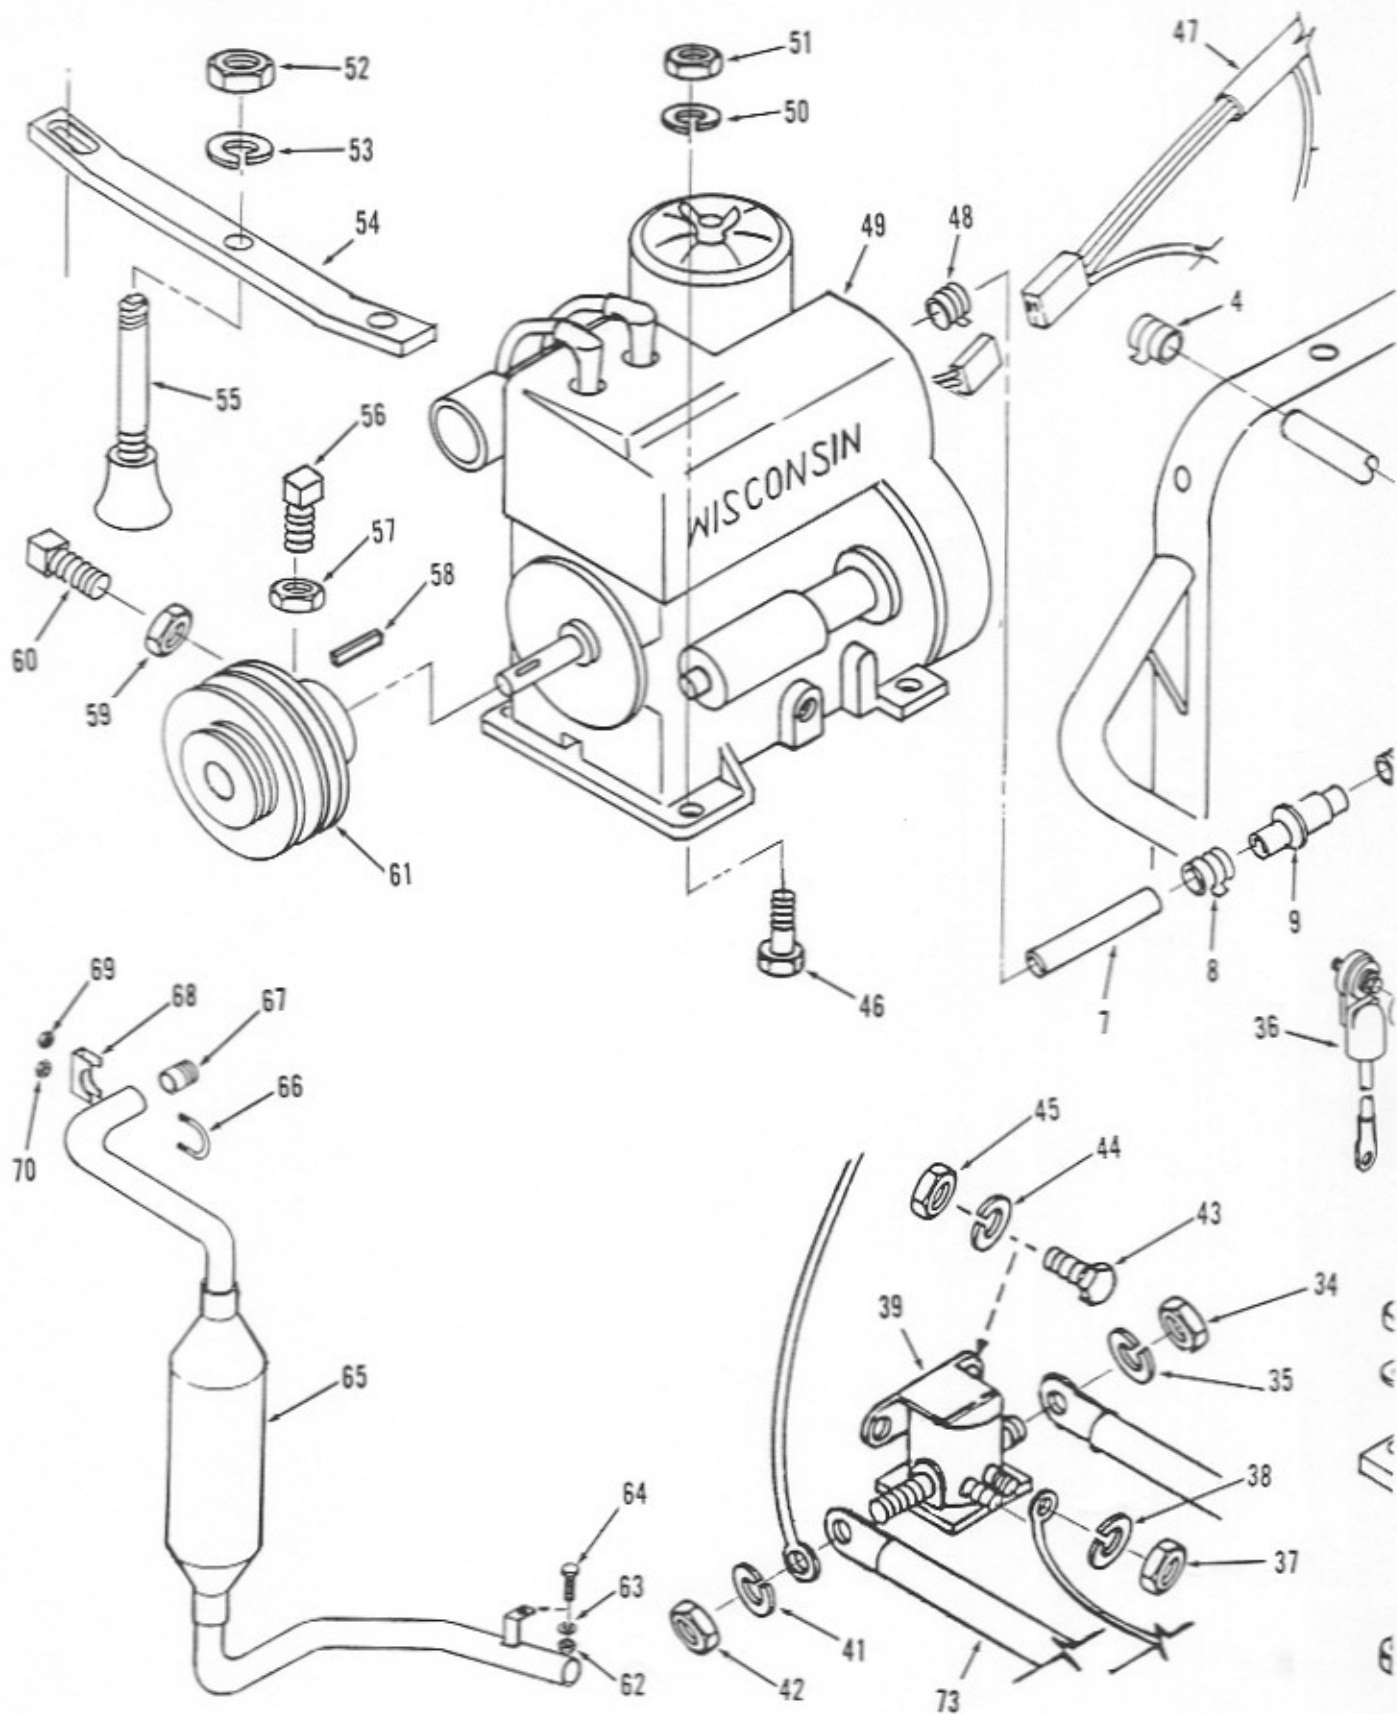


FIGURE 3. TRACTOR, EXPLODED VIEW (YHRLW20)


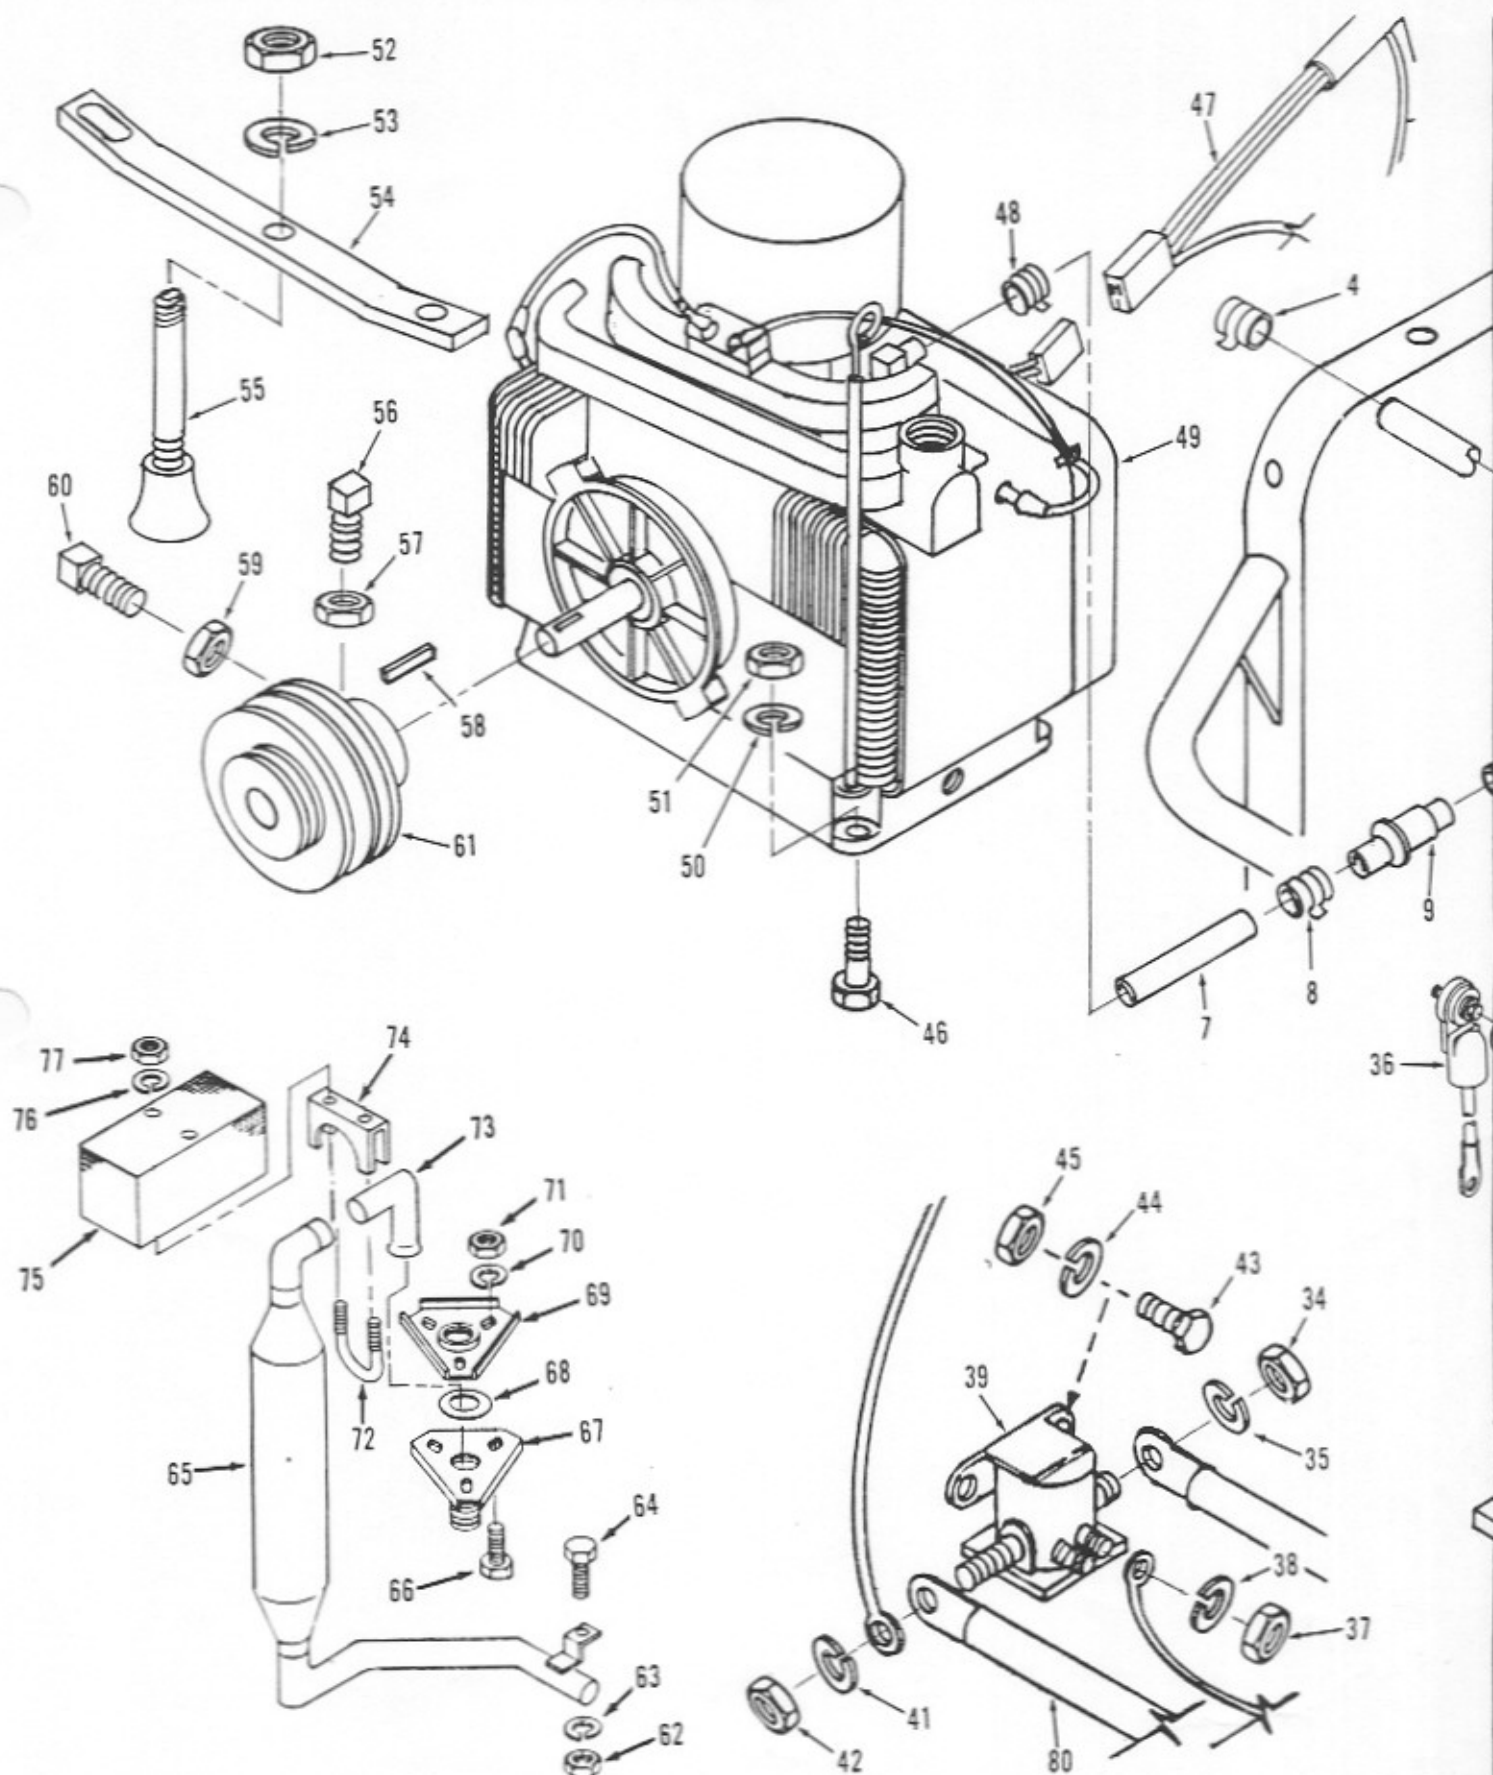



FIGURE 3B. TRACTOR, EXPLODED VIEW (YHRLK23)

ILLUSTRATED PARTS LIST

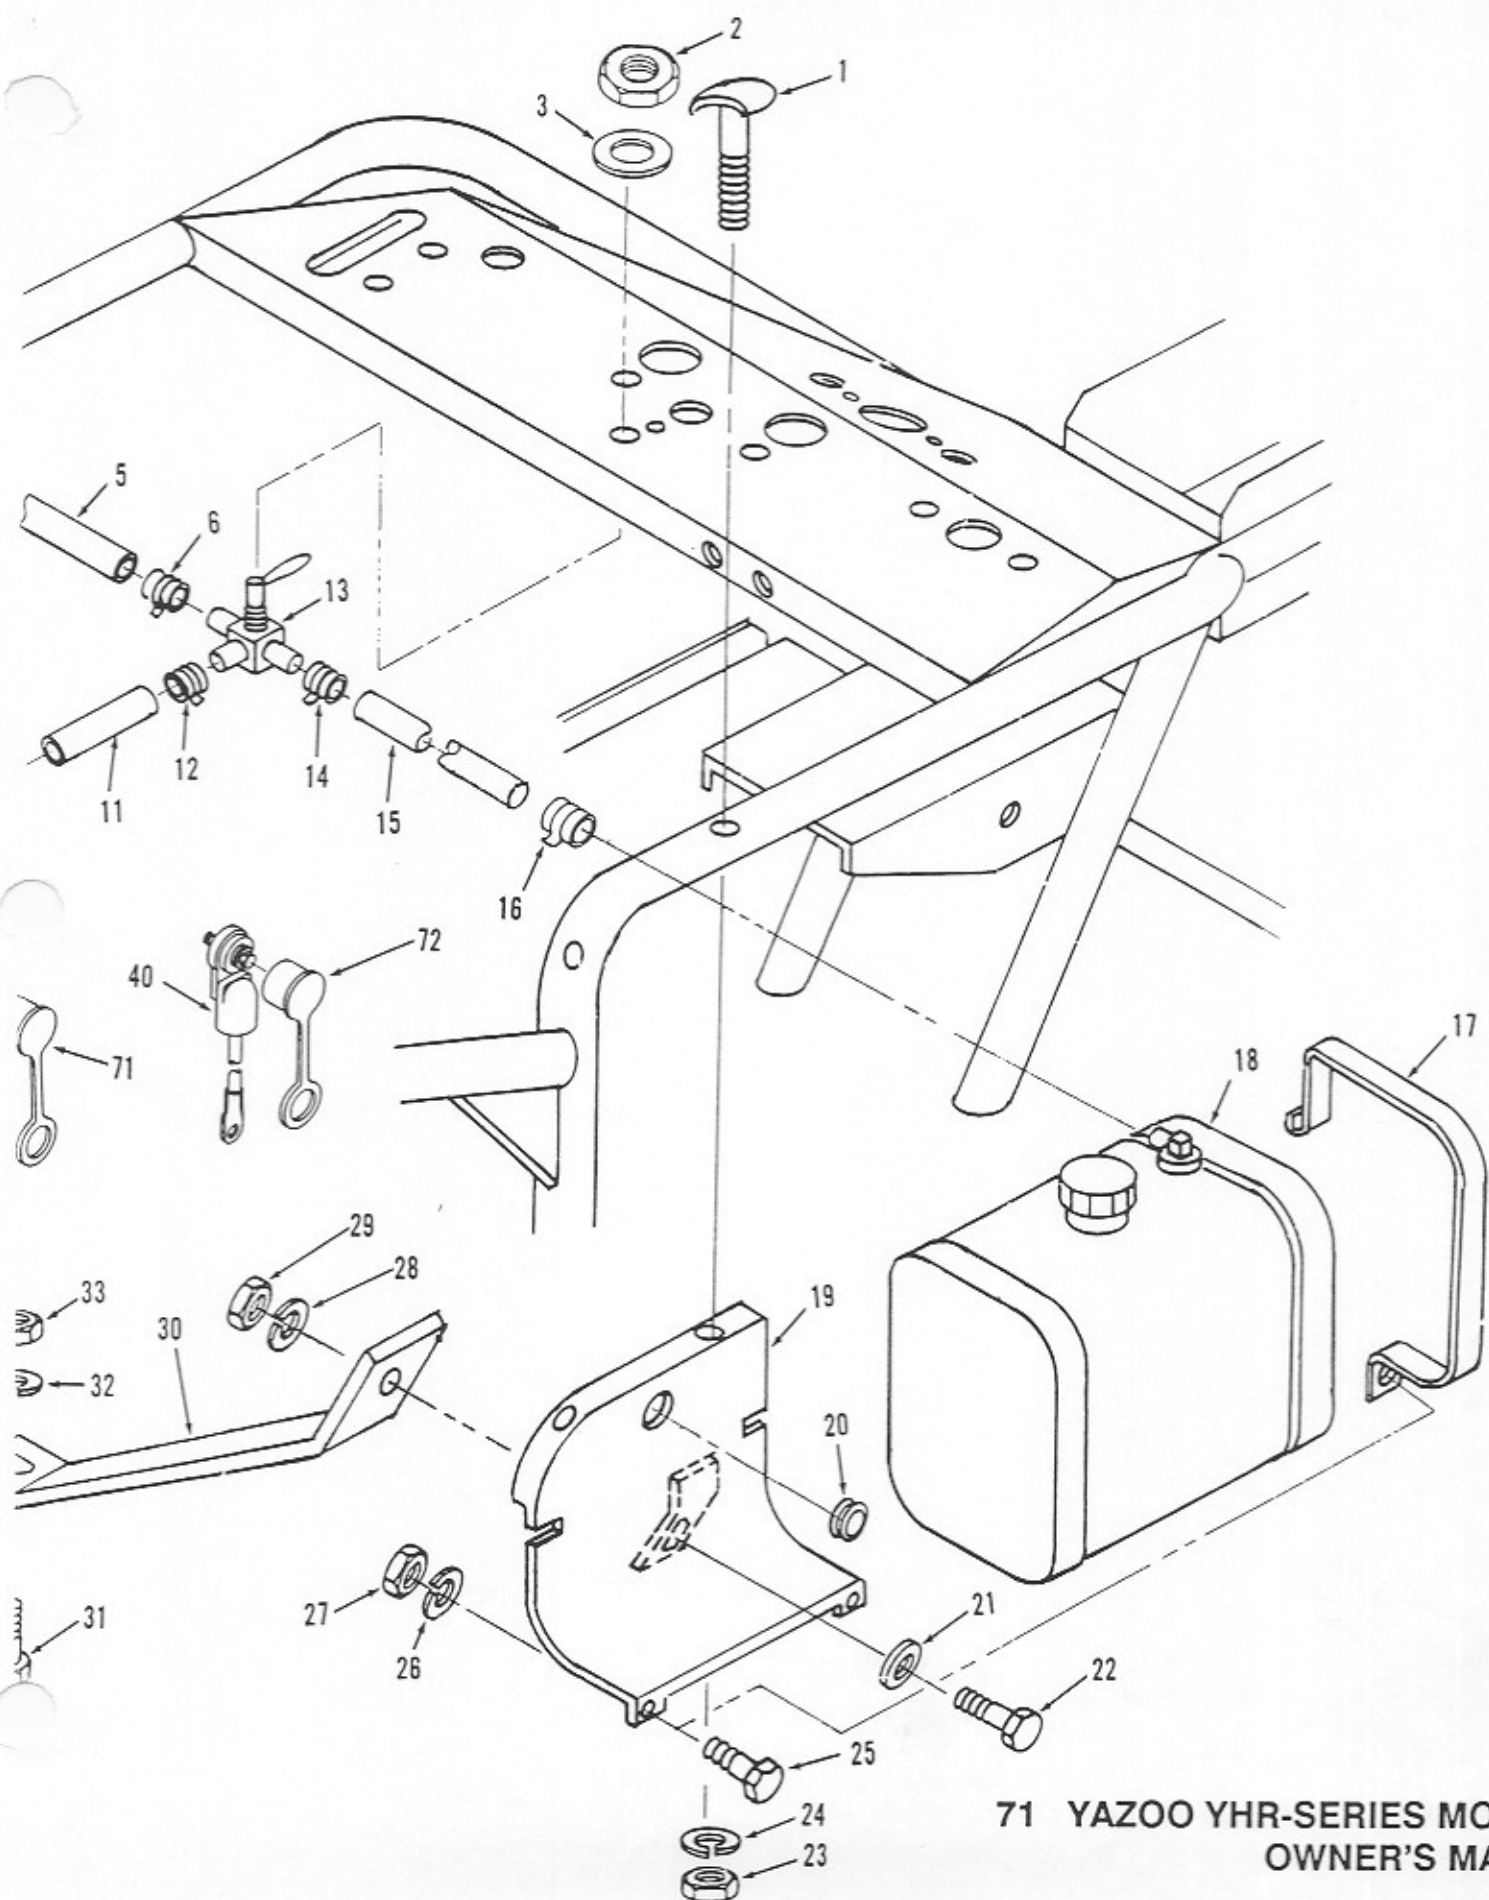

71 YAZOO YHR-SERIES MOWE
OWNER'S MANU

ILLUSTRATED PARTS LIST

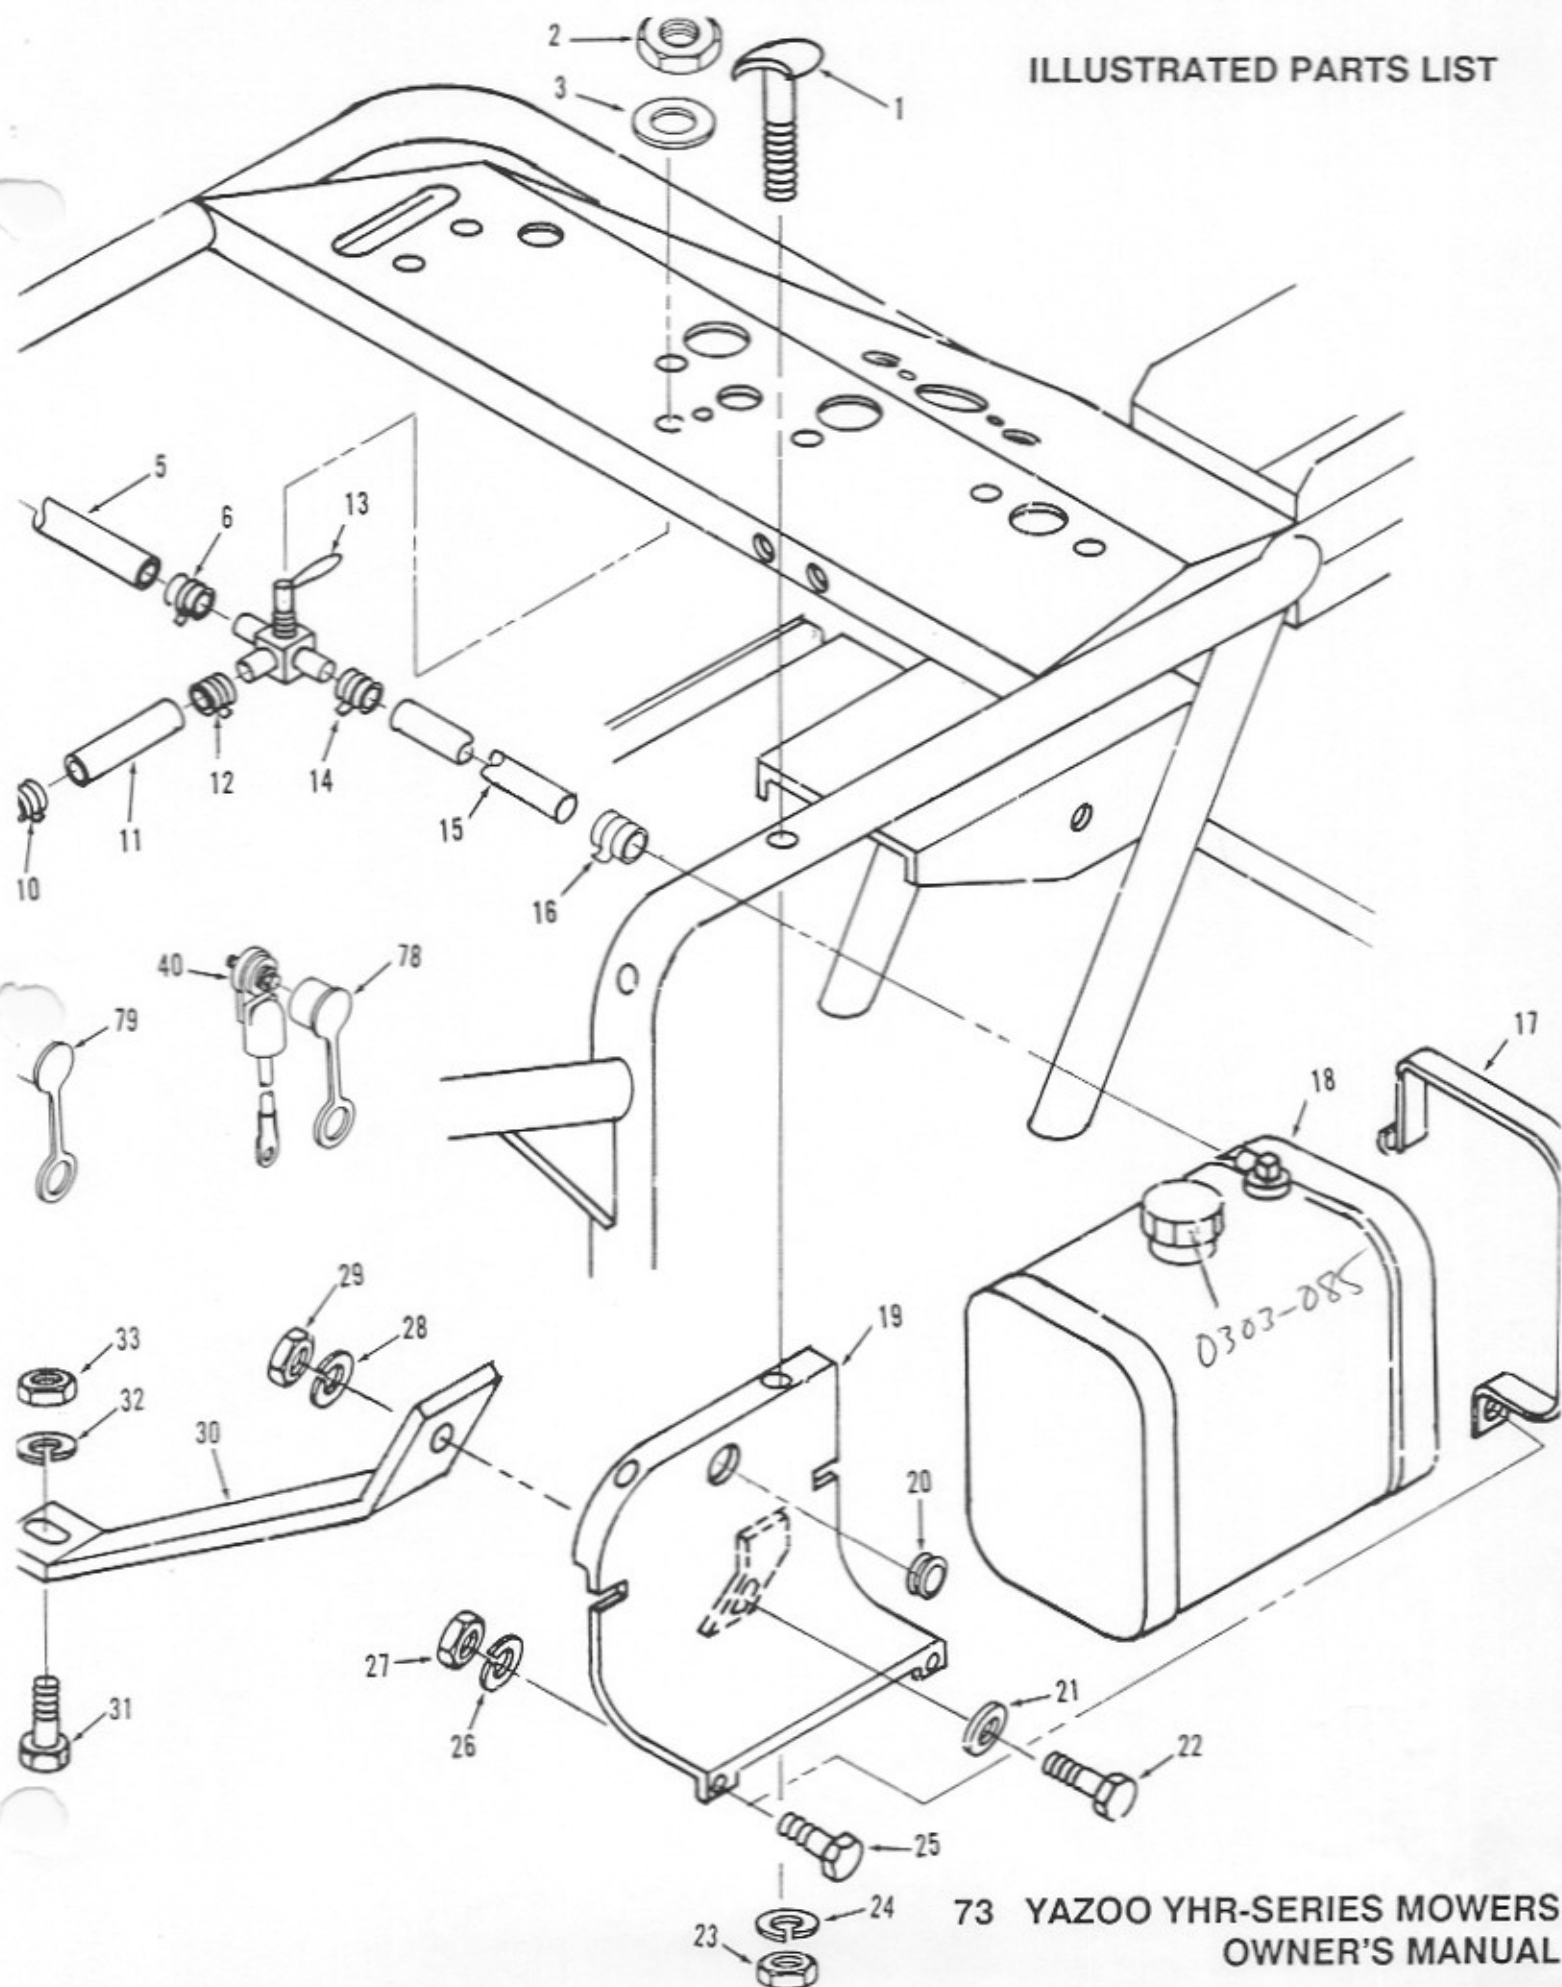

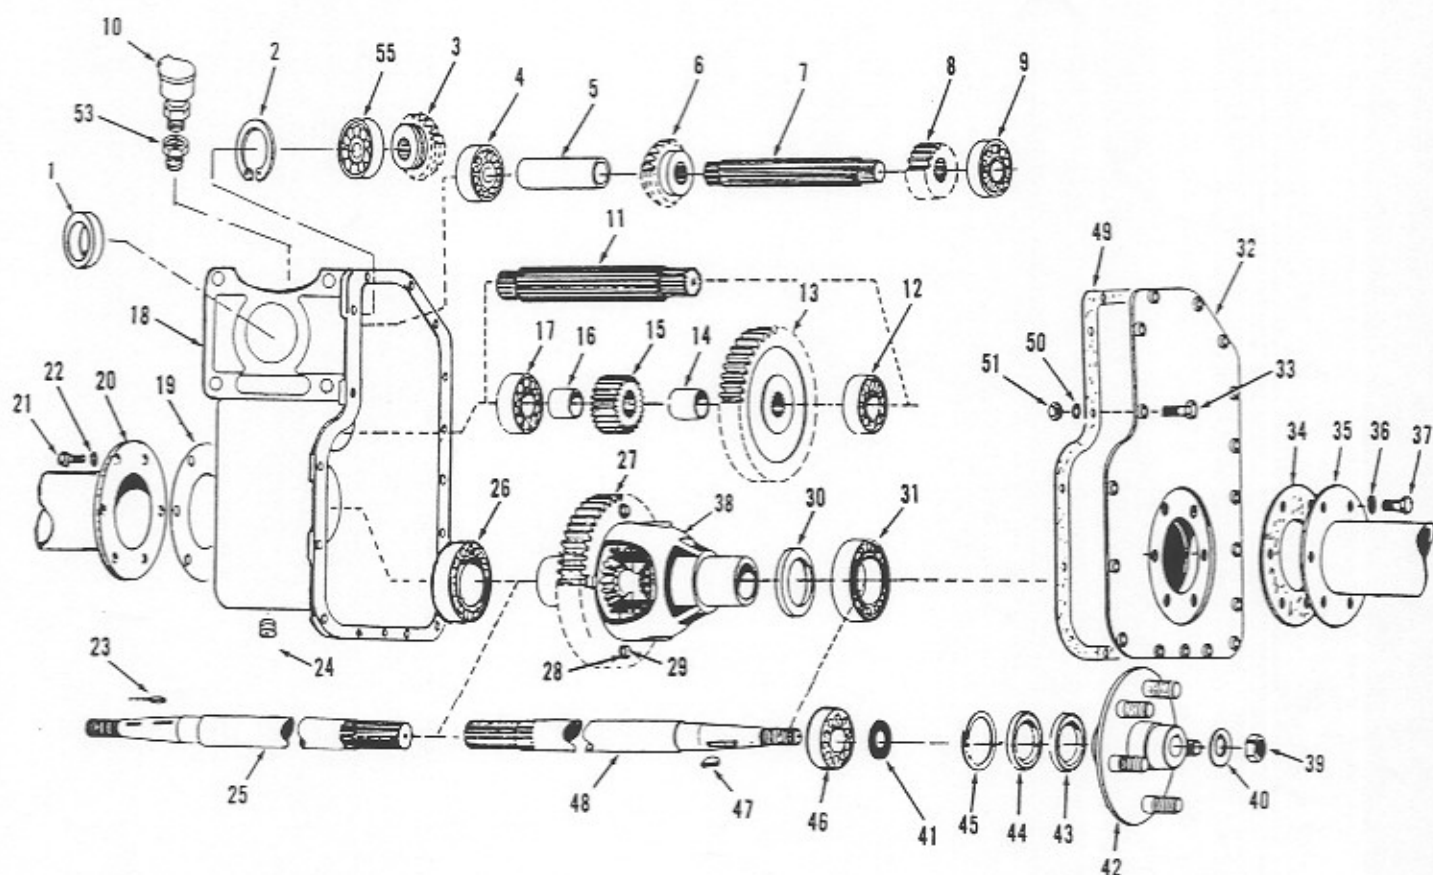


FIGURE 4. HYDROSTATIC DIFFERENTIAL, EXPLODED VIEW (ALL)

ILLUSTRATED PARTS LIST

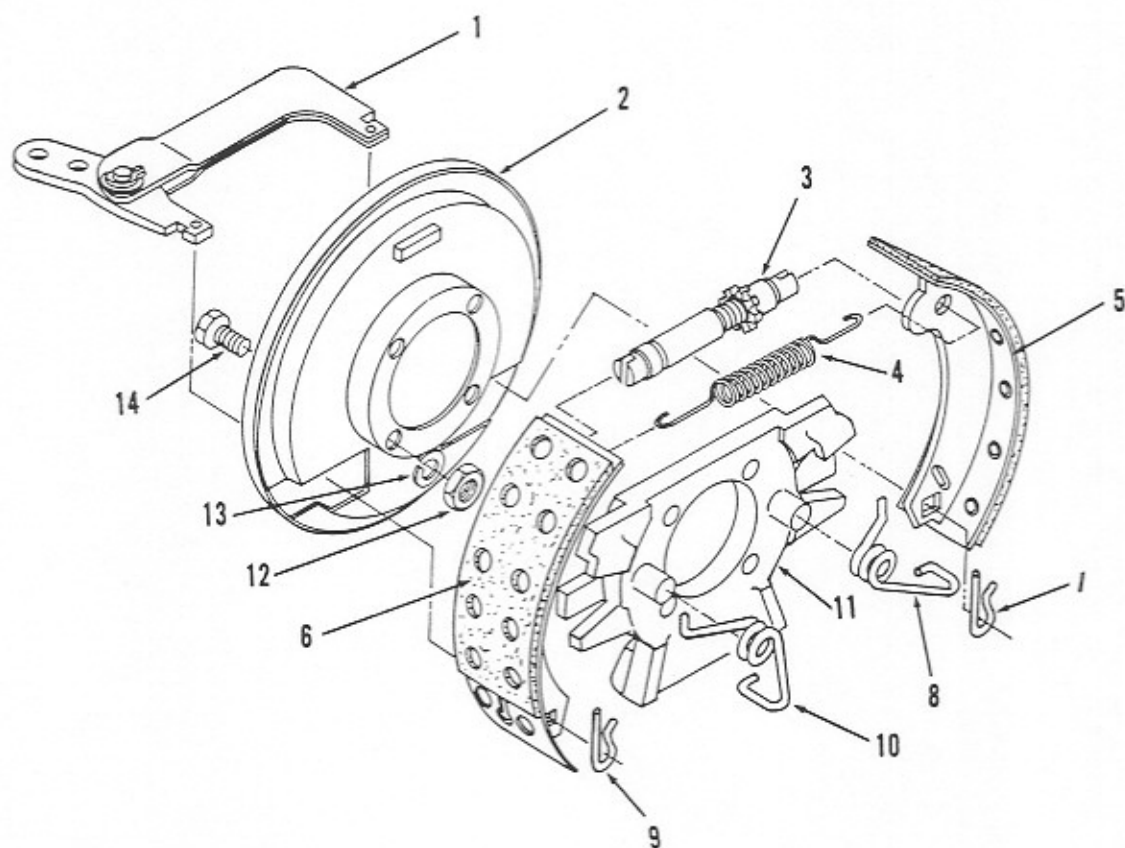


FIGURE 5. BRAKE ASSEMBLY, EXPLODED VIEW (ALL)

ILLUSTRATED PARTS LIST

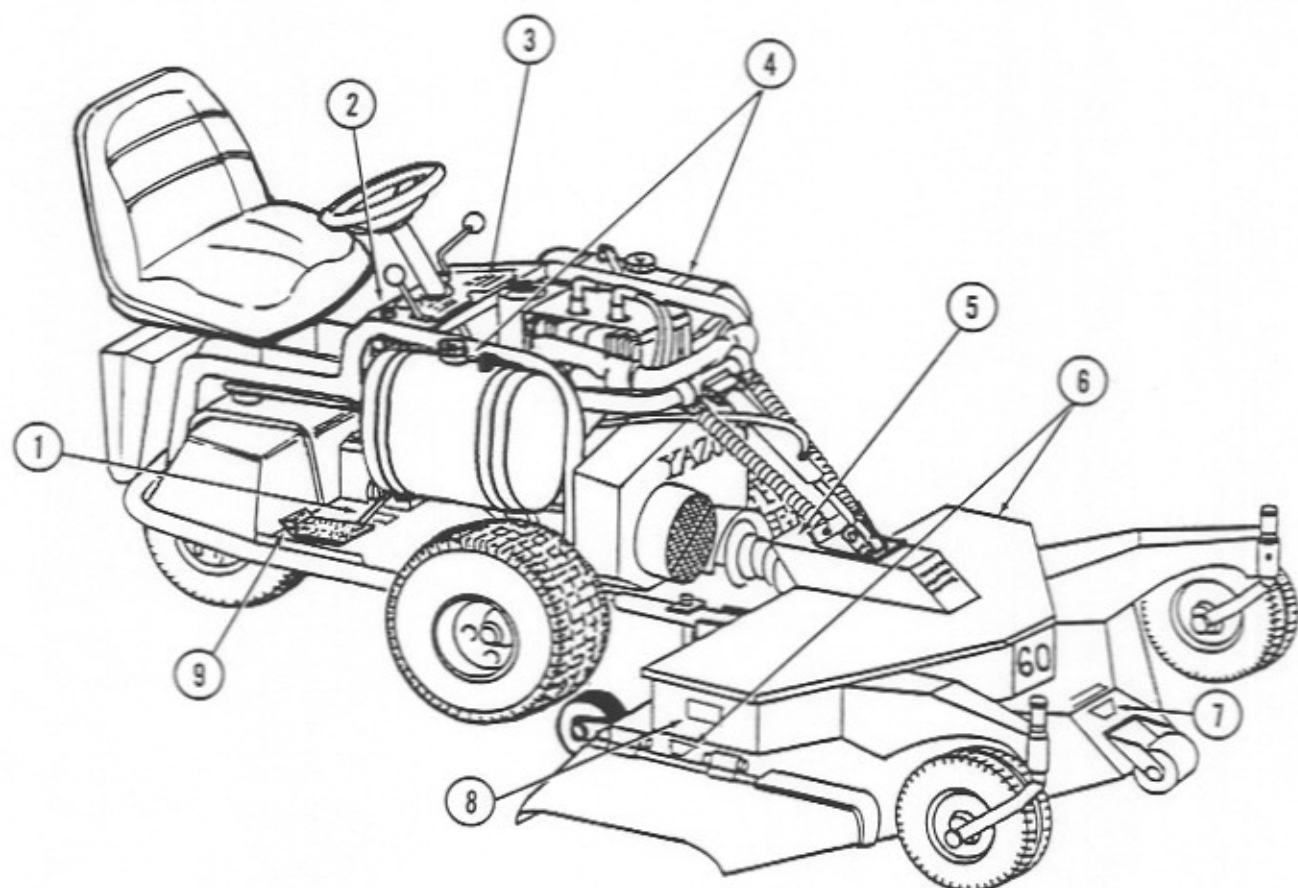


FIGURE 6. WARNING AND CAUTION DECAL PLACEMENT (ALL)